



## Single Arm Desktop Monitor Mount

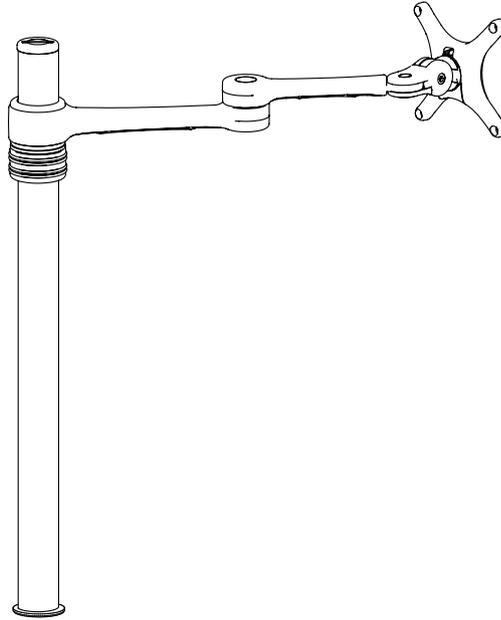


### COMPONENT CHECKLIST

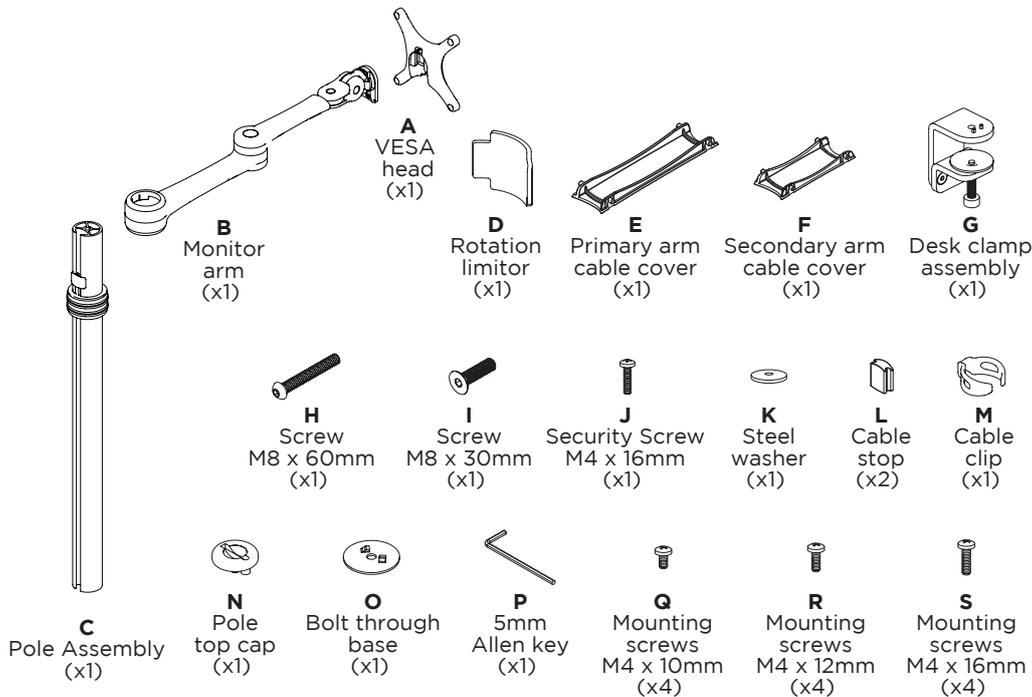

### REQUIRED TOOLS

- Power Drill
- Drill Bit
- Phillips Head Screwdriver

### WEIGHT RANGE

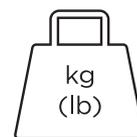

kg  
(lb)

0 - 8kg  
(0 - 17.6lbs)


### IMPORTANT INFORMATION

- ! Please ensure this product is installed as per these installation instructions.
- ! This product is compatible with the range of AF Poles and arms.
- ! The manufacturer accepts no responsibility for incorrect installation.

## 1. Desk overview


The desk clamp bracket can be repositioned to suit different mounting surface thicknesses.

### 1.1 Default

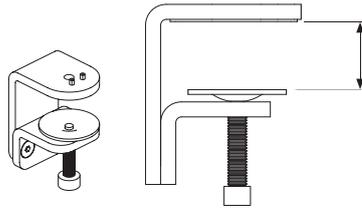

**MIN THICKNESS** - 0mm (0")  
**MAX THICKNESS** - 39mm (1.5")


### 1.2 Inverted

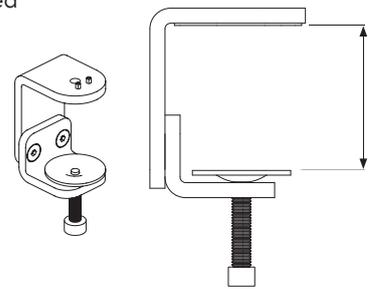


**MIN THICKNESS** - 35mm (1.4")  
**MAX THICKNESS** - 76mm (3")

## 2. How to reconfigure desk clamp


### 2.1 Remove screws (M8 x 16mm Countersunk screw)

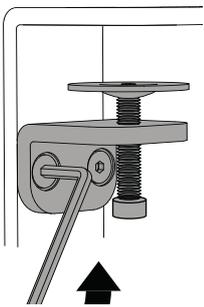


### 2.2 Remove clamp plate

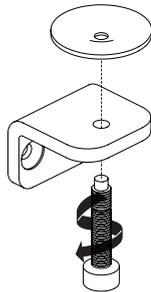


### 2.3 Invert bracket

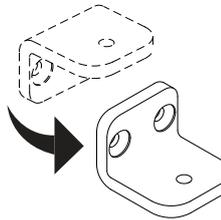

### 2.4 Replace clamp plate

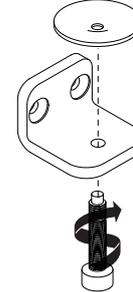

### 2.5 Reattach bracket

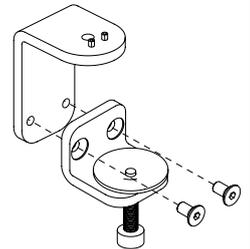


## 3. Post mount configuration


### 3.1 Attach clamp to post



### 3.2 Place in desired location

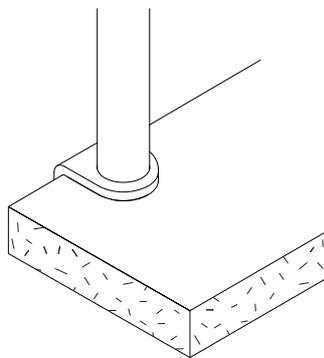


### 3.3 Screw pressure plates in and **tighten firmly**.

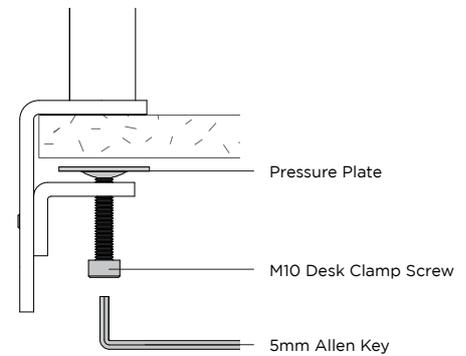


## 4. Bolt through

Drill 9mm hole in desired post position on work surface.

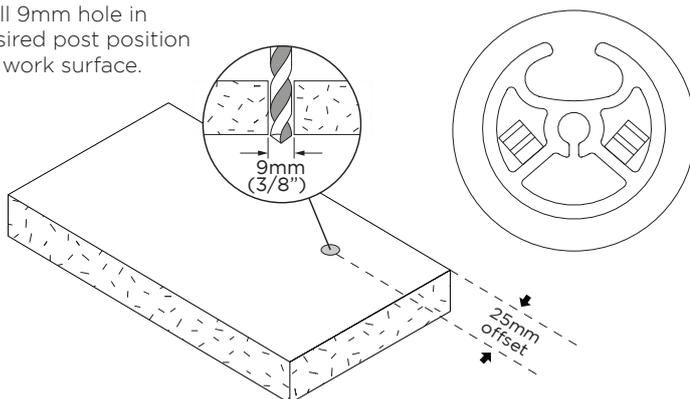


## 5. Installing bolt through


**5.1** Attach plate to post  
Align rear hole with hole on desk

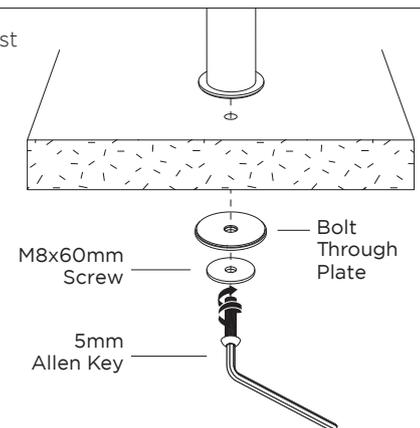


## 6. Install VESA monitor head

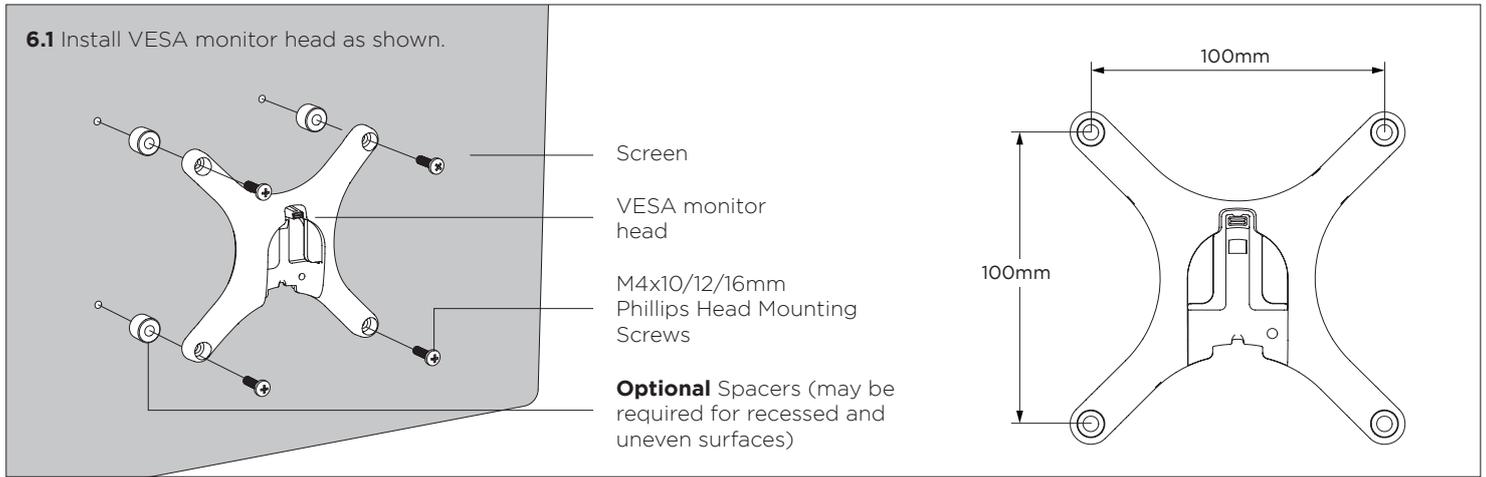


## 7. Install arm assembly

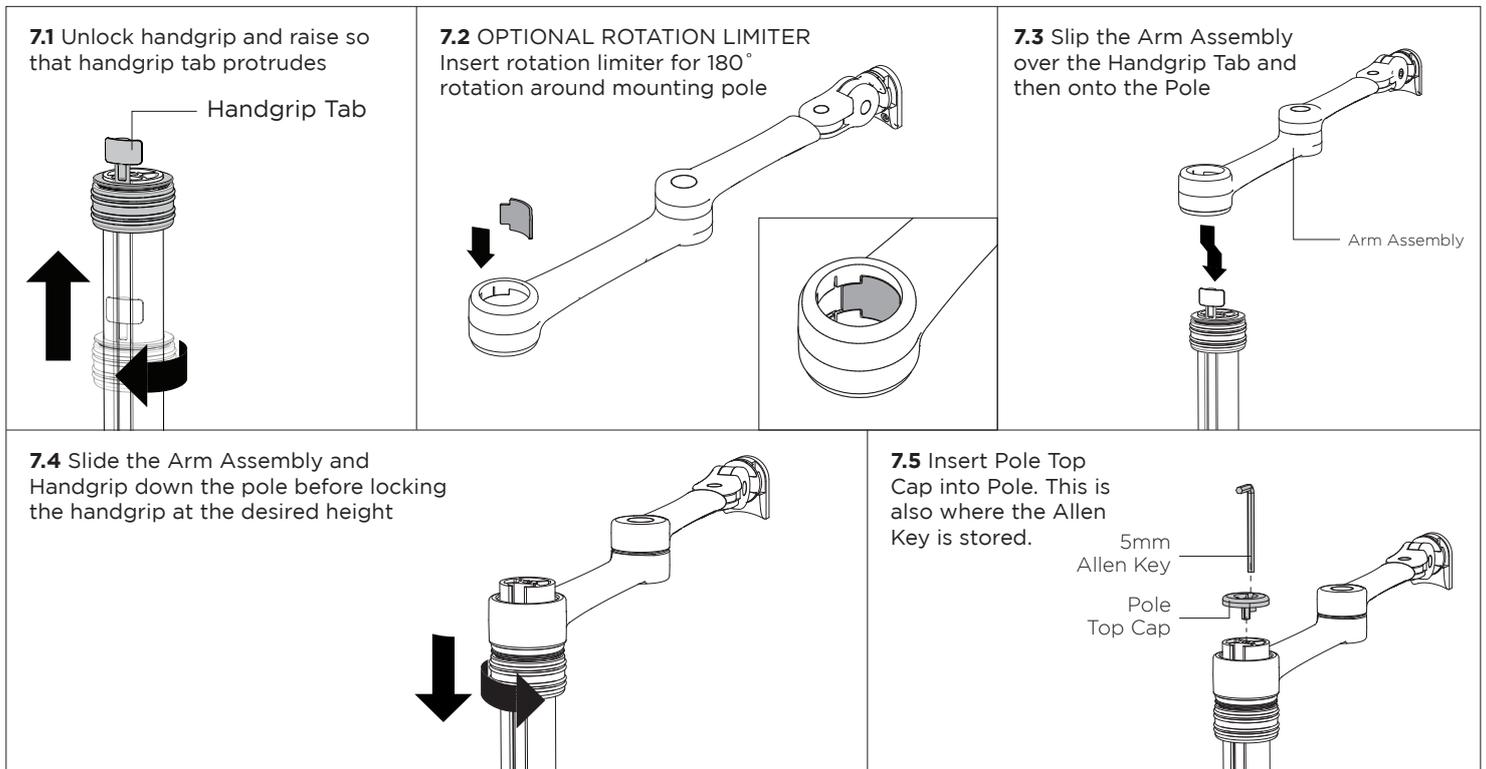


## 8. Mounting Monitor

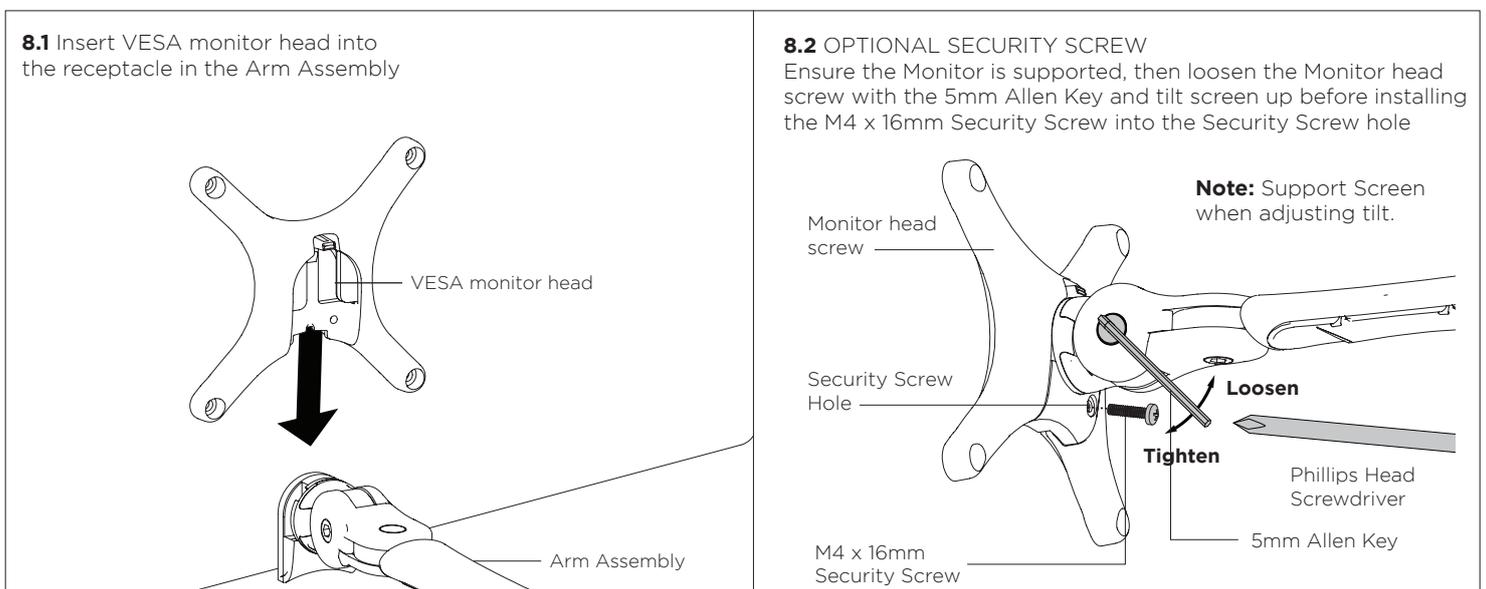


## 9. Adjusting Height

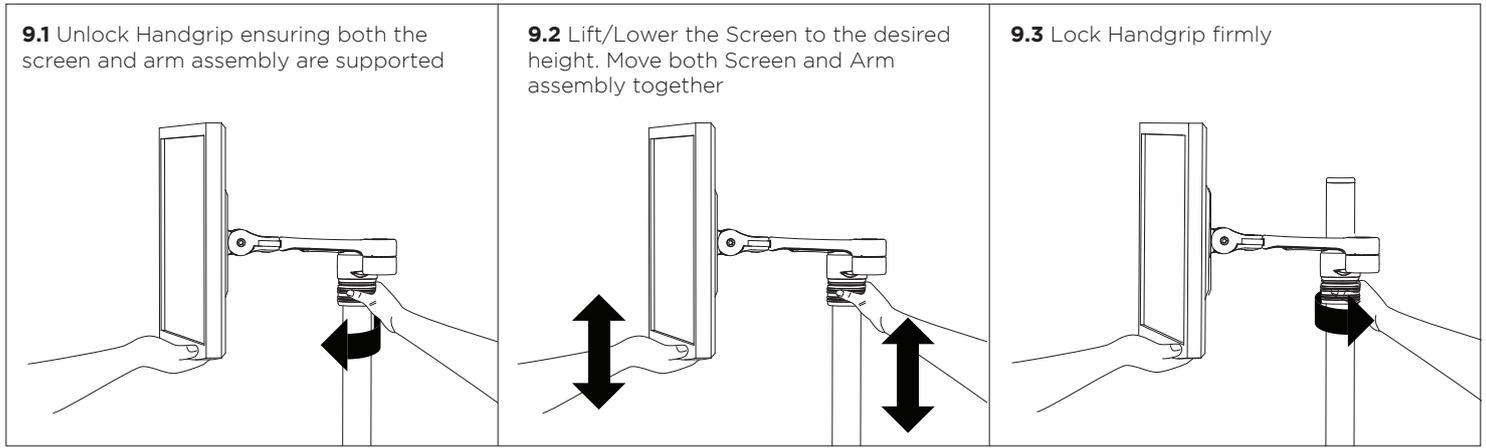

## 10. Cable Management

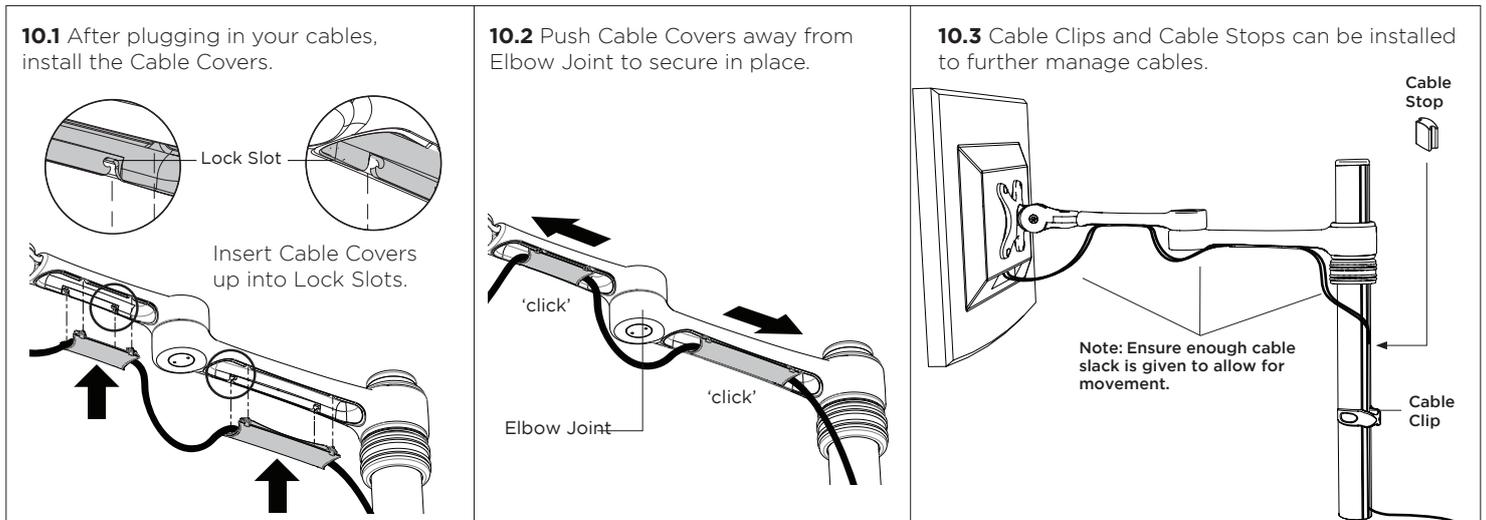

## 11. Insert Cable Stops

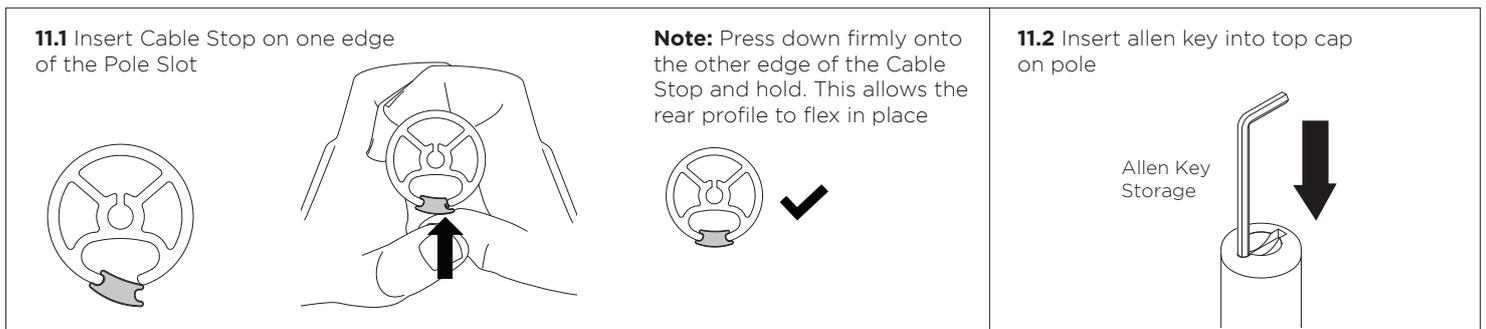

## 12. Adjusting the Display Bracket

