

Congratulations

On your new Boost Plus, Halo Plus or
Boost Light Height Adjustable Desk



www.ergolink.com.au
sales@ergolink.com.au

ergolink ergonomics
FOR HEALTHY WORKPLACES

Memory Setting & Resetting Instructions



Store Pre-set Heights

1. Use the 'UP' or 'DOWN' arrow buttons to reach the desired height.
2. Tap 'M' button (numbers will flash on the display)
3. Select the preferred number the height is to be pre-set to (1 - 3).

Recall Pre-set Height

1. Press the number (1 - 3) relating to the required height.

Reset / Synchronise the Desk

1. Ensure the working space is clear of obstructions.
2. Briefly 'TAP' the 'DOWN' arrow to wake up the controller.
3. Press & Hold the 'DOWN' arrow button to take the desk to minimum height
4. The desk will rise slightly at minimum height
5. The display will show the numeric height setting.



Always ensure the working space of the desk is clear of obstructions and pinch points.
Ensure the power source is directly from mains power outlet. Power boards are not recommended.
Please ensure that the desk is at its lowest point before moving it.

Enjoy your Height Adjustable Desk

www.ergolink.com.au

sales@ergolink.com.au