

NUMBER SLIDE

Shortcut Keys

Function	Windows PC	Android	Mac OS / iOS
Home	Fn + 	Fn + 	-
Email	Fn + 	Fn + 	-
Search	Fn + 	Fn + 	-
Calculator	Fn + 	Fn + 	-
Media Player	Fn + 	Fn + 	-
My Computer	Fn + 	-	-
Back Track	Fn + 	Fn + 	Fn + 
Play/Pause	Fn + 	Fn + 	Fn + 
Forward Track	Fn + 	Fn + 	Fn + 
Mute	Fn + 	Fn + 	Fn + 
Decrease volume	Fn + 	Fn + 	Fn + 
Increase volume	Fn + 	Fn + 	Fn + 
Lock position and move page (wired only)	Fn + Scroll Lock	-	-
Take a screenshot	Fn + Prt Scn	Fn + Prt Scn	-
Move cursor to start of line	Fn + Home	Fn + Home	Fn + Home
Move cursor to end of line	Fn + End	Fn + End	Fn + End
Page up	Fn + PgUp	Fn + PgUp	Fn + PgUp
Page down	Fn + PgDn	Fn + PgDn	Fn + PgDn
Euro Symbol (€)	Ctrl + Alt + € or Alt Gr + €	-	Alt + 2
Use number keys on number pad	Num Lock on	Num Lock on	Numbers on by default
Use arrow keys on number pad	Num Lock off	Num Lock off	-
Cut highlighted text	Ctrl + X	Ctrl + X	 + X
Copy highlighted text	Ctrl + C	Ctrl + C	 + C
Paste highlighted text	Ctrl + V	Ctrl + V	 + V