

KEYKORTEX™

INTEGRATED ON-BOARD PROGRAMMING MODULE

Mouse Mode Enable

Mouse Mode is disabled by default. To enable Mouse Mode, press and hold Left Num + FN Shift + Mouse Mode Enable key (Row 2, Col 13) for 2 seconds. This converts the middle Backspace key (Row 5, Col 7) to the Mouse Layer Toggle button.

Mouse Layer Toggle

With the Mouse Mode enabled, you can activate/deactivate the Mouse Layer with the green toggle button.

MOUSE LAYER OPERATION

Generic Mouse Controls


Standard Mouse controls, including zoom control, are all made available for single handed use on the right half of the keyboard.

Advanced Mouse Controls

Extra control actions for cursor and scroll wheel speed, mouse sensitivity levels, and shifting to text cursor is activated with the left board.

freedom
FREEDOM OF MOVEMENT

RIGHT HAND

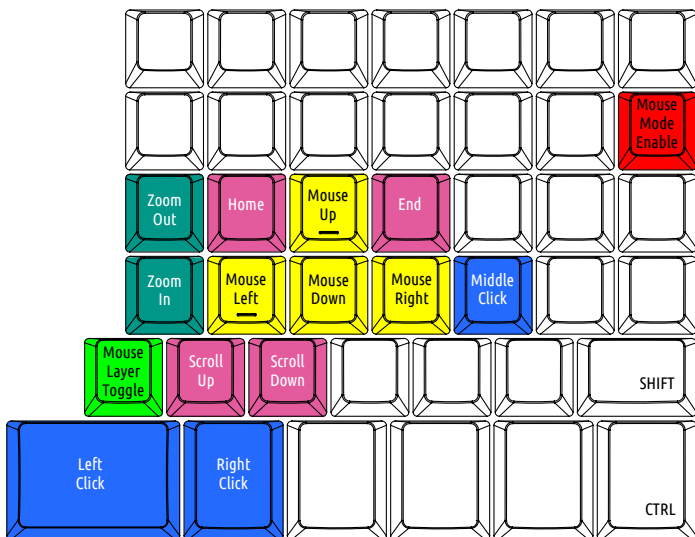

Cursor Speed Control

In addition to normal cursor speed:

Brake - Slows down cursor

Gas - Increases cursor speed

Speed - Fastest cursor speed

Sensitivity Settings

Level 1 - Low

Level 2 - Medium

Level 3 - High

Text Cursor Shift

Changes cursor from mouse pointer to text navigation cursor

Embedded Shortcuts

Cut, Copy, Paste shortcuts

Standard Keys

Modifier Keys and useful standard non-character keys (including space and Enter keys)

LEFT HAND

