

HOW TO REMOVE AND REPLACE CHAIR CASTORS


Follow these steps to remove your office chair wheels or glides.

- 1 Carefully lay your office chair down on its side so you have access to the caster wheels.



- 2 Pull out the chair wheel.

Firmly grip one chair wheel and pull away from the chair base. This should release the castor from the socket. If you are having trouble gripping the caster, try using a glove or an old towel.

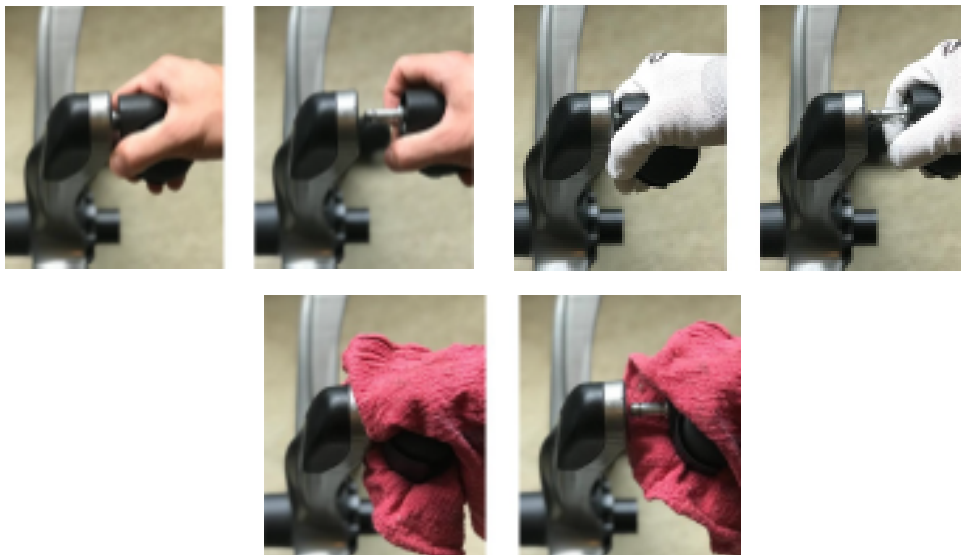

- 3 Install your new wheels.

Install the new chair wheels by pushing the castor stem all the way into the chair base socket.

- 4 Manoeuvre the chair back to its upright position.

Castors used in images are for illustration purposes – your castors may look different however the process is universal.

TYPES OF CHAIR CASTORS

Images are of 'Hooded Twin Wheel' Castors.



Standard 50mm Hooded Castor



50mm Hooded PU (Polyurethane)
Soft Tread Castor



50mm Hooded Loaded Brake Castor
(Brakes when loaded)
50mm Hooded Unloaded Brake Castor
(Brakes when Unloaded)



50mm Hooded Unloaded Brake
with PU Soft Tread Castor
(Brakes when unloaded)



50mm Hooded Castor with Manual Brake



Bell Glide