


Kensington®



Pro Fit® Ergo Vertical Wireless Mouse
Mouse Vertical Pro Fit® Ergo Sem Fio

DE Pro Fit® vertikale Ergo-Maus, kabellos	PL Wertykalna mysz bezprzewodowa Pro Fit® Ergo
FR Souris sans fil verticale Pro Fit® Ergo	CZ Vertikální bezdrátová myš Pro Fit® Ergo
NL Pro Fit® Ergo verticale draadloze muis	HU Bezdórátos vertikális egér Pro Fit® Ergo
ES Ratón inalámbrico vertical Pro Fit® Ergo	SV Pro Fit® Ergo Vertikal vesetek nélküli egér Mouse
IT Mouse Pro Fit® Ergo wireless verticale	RO Pro Fit® Ergo Vertical fără fir
DK Mouse sem flos vertical Pro Fit® Ergo	RU Беспроводная вертикальная мышь Pro Fit® Ergo
PT Ergonómico, vertical, tráfidos Pro Fit®-mus	LV Vertikālā bezdrotā pele Pro Fit® Ergo
NO Pro Fit® ergonomisk vertikal trådløs mus	KZ Pro Fit® Ergo тік сымасы тінтуірі
SE Pro Fit® Ergo vertikal trådlös mus	TR Pro Fit® Ergo Kablosuz Dikey Mouse
FI Langantou Pro Fit® Ergo -pysyhylini	GR Εργονομικό κατκόμυρο ασύρματο ποντίκι Pro Fit®
EE Traadita hiir Pro Fit® Ergo Vertikal	SK Pro Fit® Ergo موش لاسرلایس
LV Pro Fit® Ergo Vertikal bezdratā pele	ZH Pro Fit® 人體工学垂直无线鼠标
LT „Pro Fit® Ergo“ vertikaloji bešaldė pelė	JP Pro Fit® Ergo パーティカル ワイヤレス マウス

K75501WW - PRETO
K75520WW - CINZA

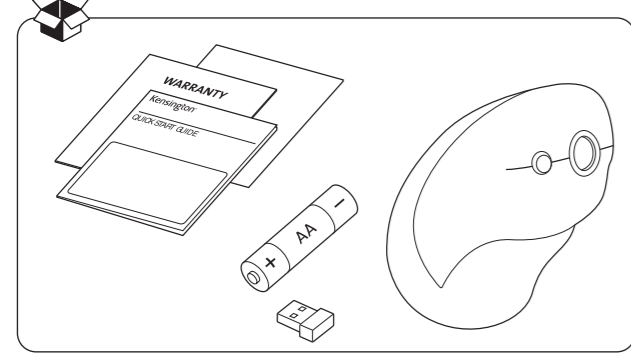

Kensington and the ACCO name and design are registered trademarks of ACCO Brands. All other registered and unregistered trademarks are the property of their respective owners. Covered by one or more of US Pat. No's 6,081,974; 6,317,936; 6,630,405. ©2021 Kensington Computer Products Group, a division of ACCO Brands. Any unauthorized copying, duplicating, or other reproduction of the contents hereof is prohibited without written consent from Kensington Computer Products Group. All rights reserved. 02/21

<p>Kensington Computer Products Group A Division of ACCO Brands 1500 Fashion Island Blvd, 3rd Floor San Mateo, CA 94404</p>		
<p>Importer: ACCO UK Ltd. Oxford House, Oxford Road Aylesbury, Buckinghamshire, HP21 8SZ United Kingdom</p>	<p>广州市天河区林和西路159号 中泰国际北塔5楼, 501/701室 邮编: 510620 电话: 400 600 4599 网址: https://www.kensington.com/zh-CN 邮箱: infocn@kensington.com</p>	<p>Импортер: ООО "Эсселте", Россия, 125040, Москва, 3-я улица Мясного поля, д. 18, тел. +7(495)933-27-63</p>
<p>ACCO Brands Australia - Kensington 2 Coronation Avenue Kings Park NSW 2148 Australia</p>	<p>アコブランドズ・ジャパン株式会社 〒164-8721 東京都中野区本町1-32-2 ハーモニータワー14F https://www.kensington.com/ja-JP E-MAIL: JPKensington@acco.com</p>	<p>Дистрибутор: Эсселте Польска Сп. з о.о., вулиця Пшемислова, 11А, 26-900 Ко зенце</p>
<p>Importer: LEITZ ACCO Brands GmbH & Co KG Siemensstraße 64 70469 Stuttgart Germany</p>	<p>ACCO Brands Asia Pte Ltd 5A, Toh Guan Road East #06-03, Singapore 608830</p>	<p>дистрибутор: Esselte Polska Sp. z o.o., ul. Przemysłowa 11A, 26-900 Kozienice Импортор: "АБДИ Компани" АК, Алматы к., Сейфуллин данг. 463/191</p>
<p>Importado e Distribuido por: TIBERA PRODUTOS DE PAPELARIA LTDA CNPJ: 44.990.901/0001-43 Rua Aymorés, 6-9 – Bauru/SP – Brasil CEP: 13013-900 sac@tibera.com.br</p>	<p>Dystrybutor: Esselte Polska Sp. z o.o., ul. Przemysłowa 11A, 26-900 Kozienice</p>	<p>Forgalmazza: Esselte Kft, Váci út 76. V. torony Erdémet, 1133 Budapest, Magyarország</p>
<p>ACCO Brands Canada Inc 7381 Bramalea Rd Mississauga, ON L5S 1C4 https://accobrandscanada.com</p>	<p>Дистрибутор: Эсселте Польска Сп. з о.о., вулиця Пшемислова, 11А, 26-900 Козенце</p>	<p>Distributor: Esselte, s.r.o., V Lužich 818, 142 00 Praha 4, Česká republika</p>
<p>Acco Brands Chile S.A., Avda. Presidente Riesco # 5711, oficina 201 Las Condes, Santiago, Chile CP 7561114 www.accobrands.cl</p>	<p>Distributor: Esselte, s.r.o., V Lužich 818, 142 00 Praha 4, Česká republika</p>	<p>Distributor: Esselte Sales SRL, Georgehe Tilelea 121C, Sector 2, Bucuresti, România</p>

1 Insert the mouse into the charging dock.

2 Insert the AA batteries into the battery compartment. **a** Insert the positive (+) battery. **b** Insert the negative (-) battery.

3 Pair the mouse with a computer. The mouse will blink and the computer will show a notification. Range: <20m.

Mouse Components / Composants de la souris / Mauskomponenten / Muisonderdelen / Componenti del mouse / Componentes del teclado / Az egér részei / Komponenty myši / Elementy myszy / Компоненты мыши / Componentes do mouse

A Left Button / Linke Maustaste / Bouton gauche / Linkerknop / Botón izquierdo / Tasto sinistro / **Botão para a Esquerda** / Venstre museknapp / Venstre knapp / Vänster knapp / Vasen painike / Vasak nupp / Kreisä poga / Mygtukas kairèn / Lewy przycisk / Levé tlačítko / Lavé tlačidlo / Bal gomb / Buton stânga / Левая кнопка / Ліва кнопка / Сол жақ түйме / Sol Tuş / Αριστερό κουμπί / الزر الأيسر / 左鍵 / 左ボタン

B Right Button / Rechte Maustaste / Bouton droit / Rechterknop / Botón derecho / Tasto destro / **Botão para a Direita** / Højre museknapp / Høyre knapp / Höger knapp / Oikea painike / Parem nupp / Labã poga / Mygtukas dešinèn / Prawy przycisk / Pravé tlačítko / Pravé tlačidlo / Jobb gomb / Buton dreapta / Правая кнопка / Права кнопка / Оң жақ түйме / Sağ Tuş / Δεξιά κουμπί / الزر الأيمن / 右鍵 / 右ボタン

C Scroll wheel / Mausrad / Molette de défilement / Scrollwiel / Rueda de desplazamiento / Rotella / **Scroll do mouse** / Rullehjul / Scrollhjul / Vieritysrullaa / Kerimisketas / Ritenitis / Slinkimo ratukas / Pokręto przewijania / Rolovací kolečko / Koliesko / Görgetőgomb / Rotiã de derulare / Колесо прокрутки / Колесо прокрутки / Жылжыту дөңгелегі / Kaydırma tekeri / Τροχός κύλισης / عجلة التمرير / 滚轮 / スクロールホイール

D DPI switch button / DPI-Knopftaste / Bouton de commutation DPI / DPI-schakelknop / Selector de PPP / Tasto per la selezione dei DPI / **Botão PPP** / Knap til skift af DPI / DPI-knapp / DPI-knapp / DPI-kytkin / DPI-lüliti nupp / DPI slédža poga / DPI perjungimo ratukas / Przełącznik rozdzielczości DPI / Přepínač DPI / Přepínacie tlačidlo DPI / DPI beállító gomb / Buton comutare DPI / Переключатель скорости движения указателя / Перемикач DPI / DPI қосқышы / DPI değıstirme tuşu / Κουμπί αλλαγής ανάλυσης DPI / DPI 开关按钮 / DPI 切り替えボタン

E Forward / Eine Seite vor / Commande d'avance Vooruit / Adelante / Avanti / **Avançar** / Frem / Frem / Framåt / Eteenpäin / Edasi / Uz priekšu / Pirmyn / Dalej / Vpřed / Dopredu / Előre / Înainte / Вперед / Вперед / Афа / Ileri / Μπροστά / أمام ال / 向前 / フォワード

F Back / Eine Seite zurück / Commande de retour Terug / Atrás Indietro / **Retroceder** / Tilbage / Tilbake / Bak / Taaksepäin / Tagasi / Atpakaļ / Atgal / Wstecz / Vzdal / Spät / Vissza / Inapoi / Назад / Назад / Артқа / Geri / Πίσω / رجوع للخلف / 后退 / バック

G Power Switch / Netzschalter / Interrupteur marche/arrêt / Voedingsschakelaar / Botón de encendido / Interruttore di alimentazione / **Botão liga e desliga** / Tænd/sluk-kontakt / Strömbryter / Strömbrytare / Virtakytkin / Toitelüliti / Strävas slēdzis / Maitinimo jungiklis / Przełącznik zasilania / Υψιναέ / Υψιναέ / Bekapcsoló gomb / Comutator alimentare / Выключатель питания / Вимикач / Қуат қосқышы / Güç Düğmesi / Διακόπτης ενεργοποίησης / قوأت التشغيل / 电源开关 / 電源スイッチ

Re-pairing with new dongle / Mit einem neuen Dongle koppeln / Nouvel appairage avec un nouveau dongle / Opnieuw koppelen met nieuwe dongle / Reemparejamiento con nuevo dongle / Abbinamento con un nuovo dongle / Novo emparelhamento com dongle novo / Parring igen med ny dongle / Re-sammenkobling med ny dongle / Para om med ny dongel / Uusi pariliitos uuden sovittimen kanssa / Taassidumine uue tongligasidumine / Atkalsavienošana ar jaunu sargspraudni / Pakartotinis siejimas su nauju raktu / Ponowne parowanie z nowym kluczem sprzętowym / Opřetovné spárování s novým hardwarovým klíčem / Opätovné párovanie s novým hardvérovým kľúčom / Újbóli párosítás új hardverkulccsal / Asociați din nou cu noua cheie software / Повторное сопряжение с новым адаптером / Підключення з новим передавачем / Жаңа шифратор арқылы қайта жөндеу / Yeni güvenlik cihazı ile tekrar eşleştirme / إعادة الإقران بدونجل الجديد / 重新配对新接收器配件 / 新しい dongle と再ペアリング

1 Plug the USB dongle into the computer.

2 Press the DPI switch button (a) to turn it ON. Press the DPI switch button (b) to turn it OFF.

3 Press the scroll wheel for 5-8 seconds.

4 The mouse will blink and the computer will show a notification.

5 The mouse is now paired with the computer. Range: <50cm.

DPI (Flash on scroll wheel) / DPI (DPI-Einstellung blinkt am Mausrad) / DPI (Clignotement sur la molette de défilement) / DPI (flits op scrollwiel) / PPP (parpadeo en la rueda de desplazamiento) / DPI (passare rapidamente sulla rotella) / PPP (Flash no scroll do mouse) / DPI (skift på rullehjul) / DPI (indikator på rullehjul) / DPI (blixst på scrollhjul) / DPI (vilkkuvalo vieritysrullassa) / DPI (lamp kerimiskettal) / DPI (gaisma uz riteniša) / DPI (užšizėbia pasukus ratuką) / Regulowana rozdzielczość DPI (wskaźnik na pokrętle przewijania) / DPI (blikání na rolovacím kolečku) / DPI (blikanie na koliesku) / DPI (a görgetőgomb felvillan) / DPI (Flash pe rotița de derulare) / Скорость движения указателя (световой индикатор на колесе прокрутки) / DPI (индикатор на колесі прокрутки) / Нүкте/дәйм (жылжыту дөңгелегиндегі жарық) / DPI (Kaydırma tekerinde yanar) / DPI (Αναβοσβήνει στον τροχό κύλισης) / DPI (滚轮闪烁) / DPI (スクロールホイールで点滅)

