




Part	Picture	Qty.
A		5
B		1
C		1
D		1


1

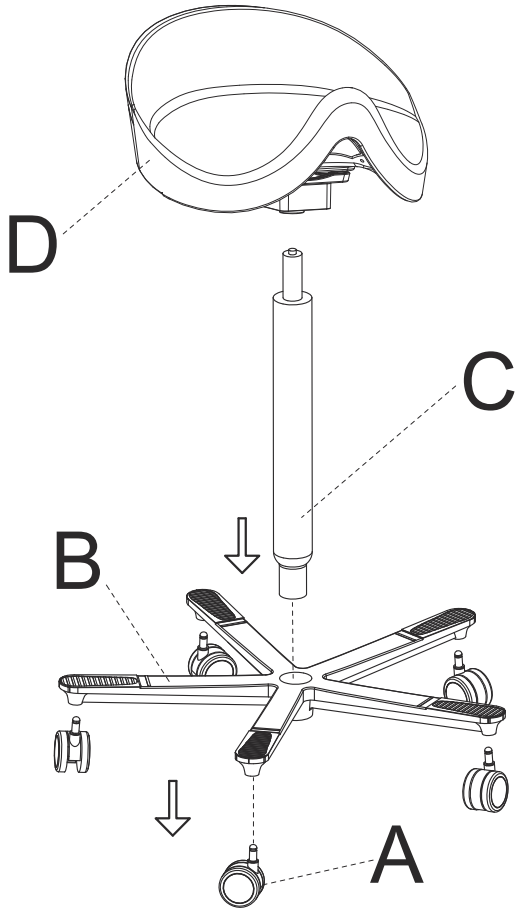

2

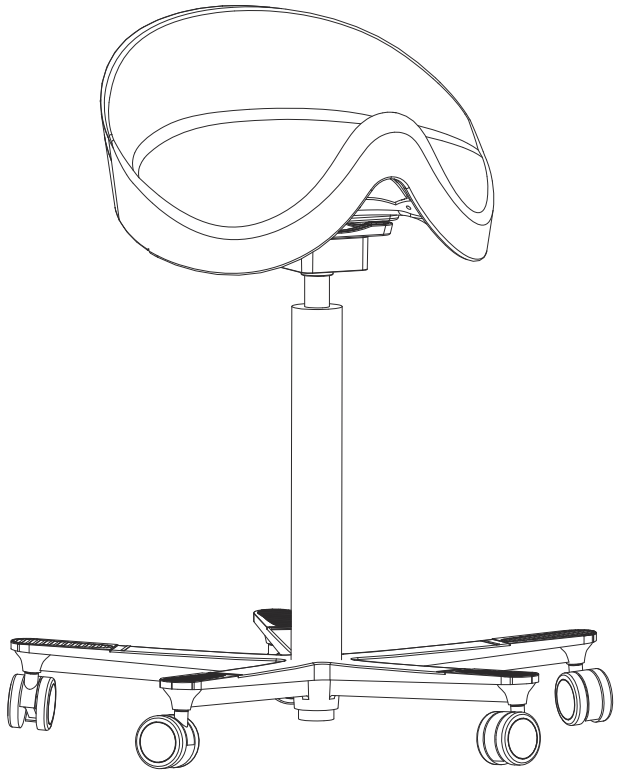


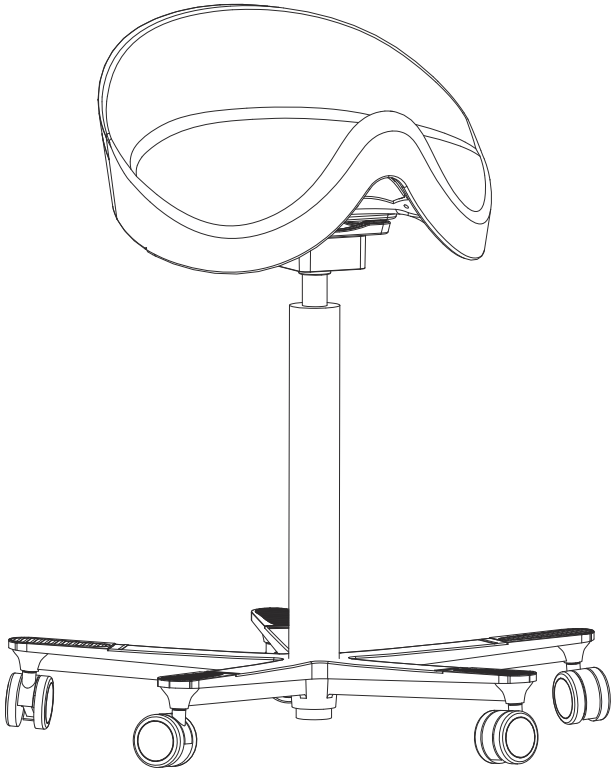


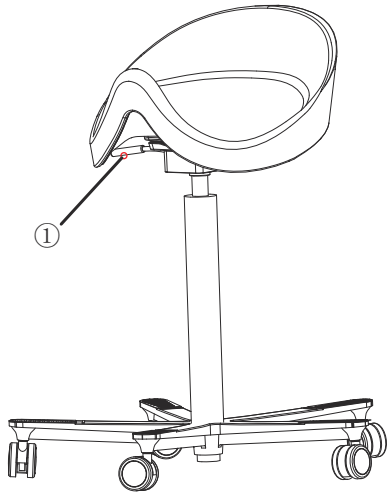

Seat height adjustment:

To raise the seat height, remove weight from the seat and pull up on the height adjustment lever(①), release the lever when reaching the desired position. To lower the seat height, while seated, pull up slowly on the height adjustment lever until the seat is at the desired height.

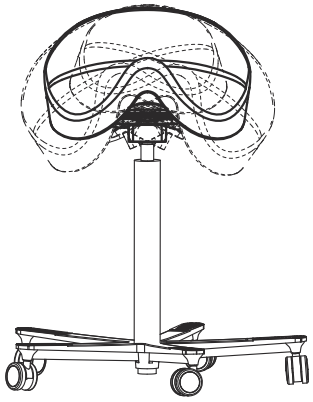

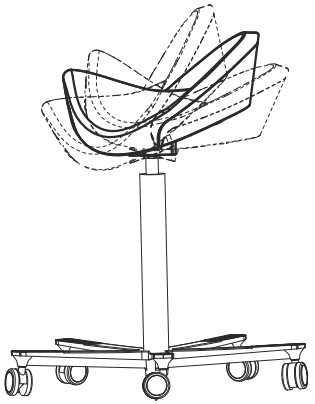

Seat adjustment:

The seat is available for 4D movement, when sit on the chair, move forward or backward or sideward, the seat will follow your body automatically.