

## ASSEMBLY INSTRUCTIONS:

Product Code : SPC12 / SPC18 / CMZ1245 / CMZ1545 / CMZ1845

Product Name: Rapid Worker Credenza

## TIME REQUIRED:

35 minutes

## TOOLS REQUIRED:

Screwdriver, Electric Drill, Pencil, Measuring tape/Ruler

\*Tools are not included.

## SKILL REQUIRED:

Easy  Hard

The Assembly Skill Rating is a 5-point system that shows the degree of effort needed in assembling a specific product. With 1 being easy for the average person and 5 requiring an expert. For most products, two persons are recommended.

### NOTE

- As this is a commercial product, some intermediate skills may be required.
  - No pre-drill holes or markings are provided on our table or desk tops.
  - Please check you have all hardware before assembling.
- If you are missing any hardware, please contact your Rapidline reseller. Please ensure you have the name of the item, required hardware part and quantity.
  - Please retain your receipt as proof of purchase to validate your warranty.
- Assemble on a clean, flat, smooth surface such as a rug or carpet to avoid parts from being scratched.
- Remove all wrapping materials, including staples and packing straps before you start to assemble
  - Keep all hardware parts out of reach of children.

### CAUTION

- Heavy product. Do not attempt to lift or move without help
- Do not tighten screws and bolts until completely assembled.
- Do not use this product unless all bolts and screws are firmly secured and tightened.

### WARNING

- If parts are missing, broken, damaged or worn stop using the product until all repairs are made.
- Failure to follow these warnings could result in serious injury.











The logo for Rapidline, featuring the word "rapidline" in a lowercase, sans-serif font. The "i" in "rapid" has a small orange dot above it. The logo is set against a light blue background with rounded corners.

# ASSEMBLY INSTRUCTIONS


## CMZ1845 & SPC18




|                         |                           |
|-------------------------|---------------------------|
| pin<br>1<br>24PCS       | 6x35<br>CAM<br>2<br>24PCS |
| Cam Cover<br>3<br>24PCS | Bolt M8x16<br>4<br>8PCS   |
| T-Handle<br>5<br>2PCS   | Screw<br>6<br>4PCS        |
| CUSHION<br>7<br>6PCS    | Screw<br>8<br>6PCS        |
| LOCK<br>9<br>1PCS       | Screw<br>10<br>2PCS       |
|                         |                           |

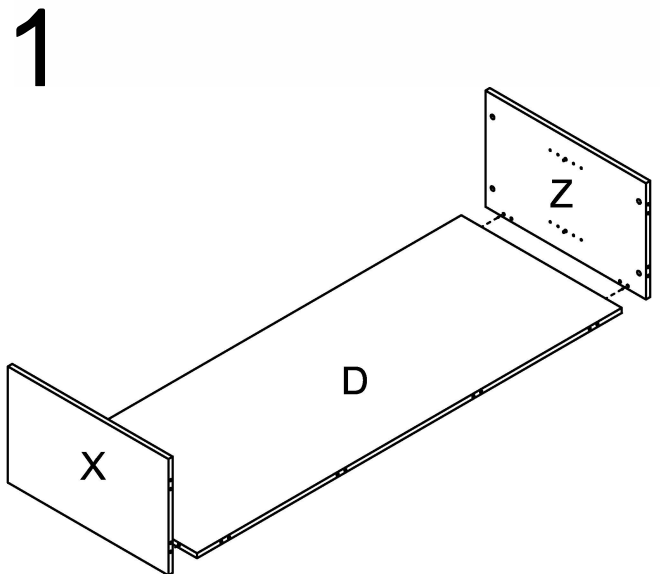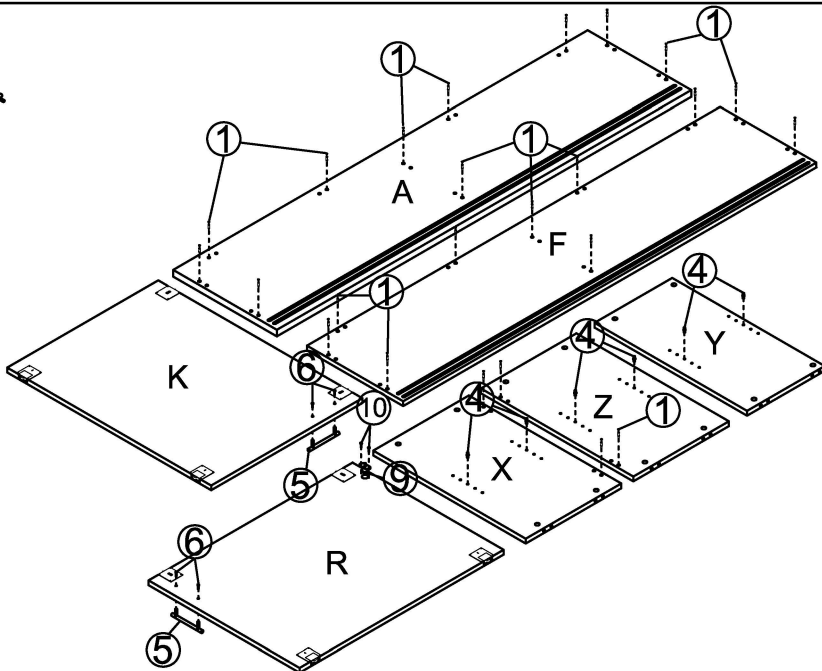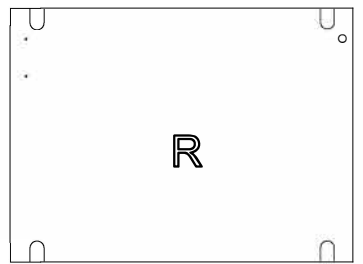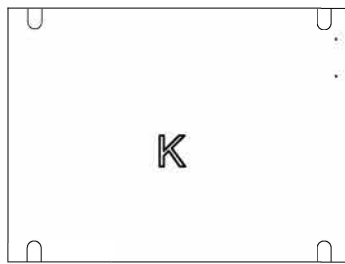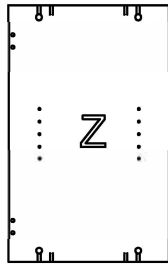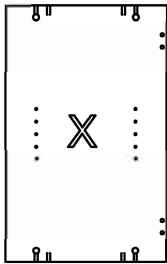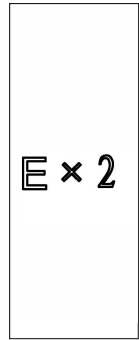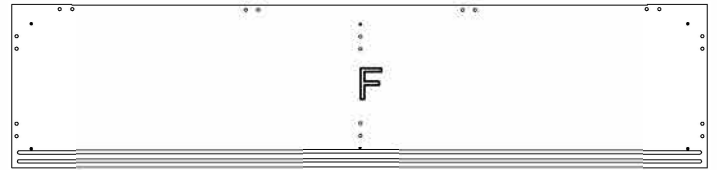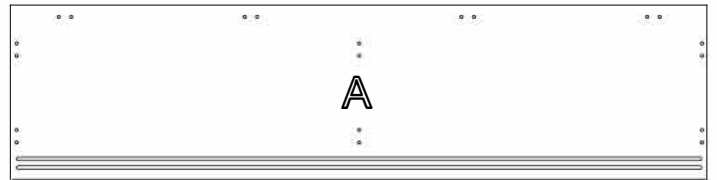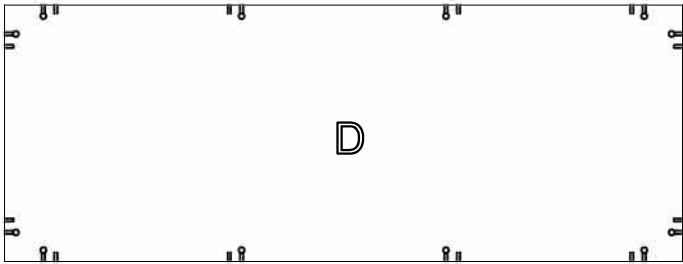


2

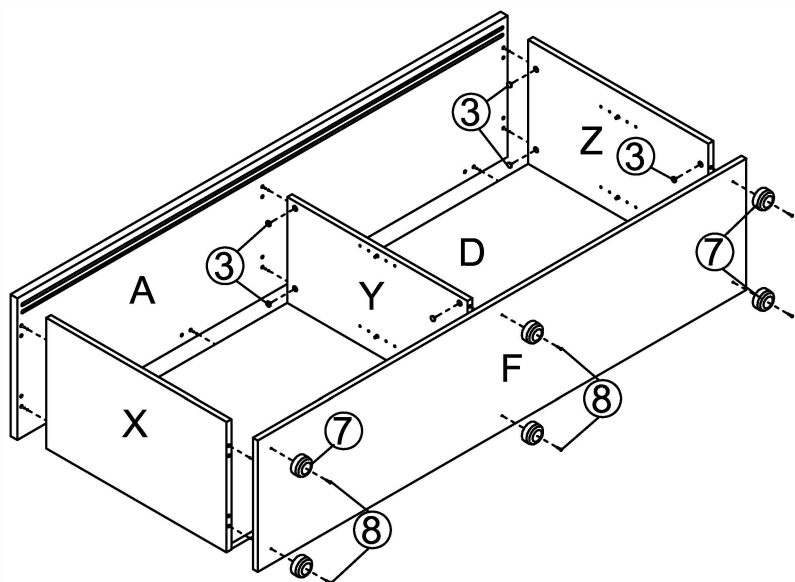


3

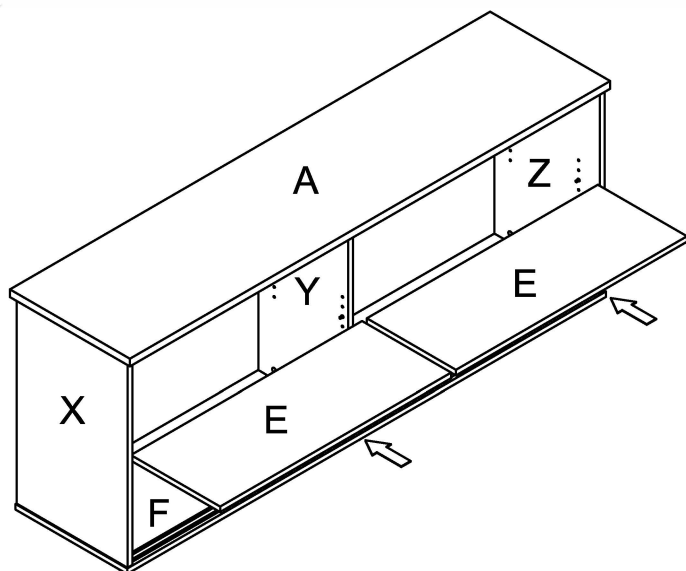


4

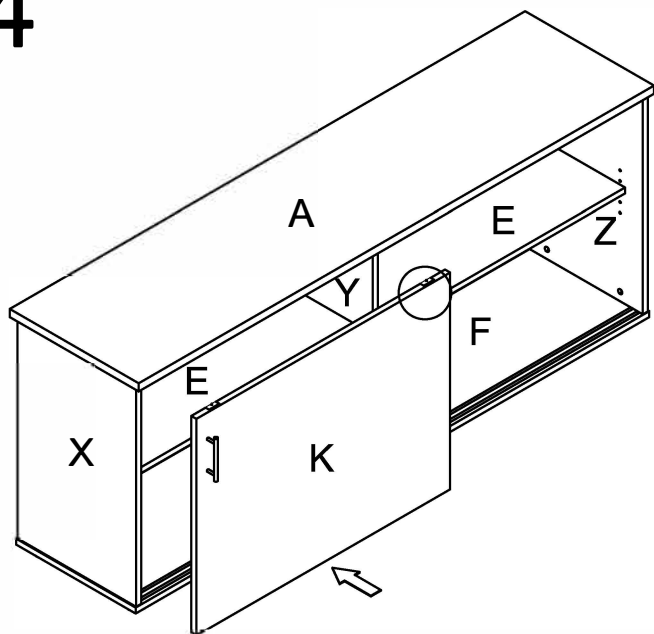


5

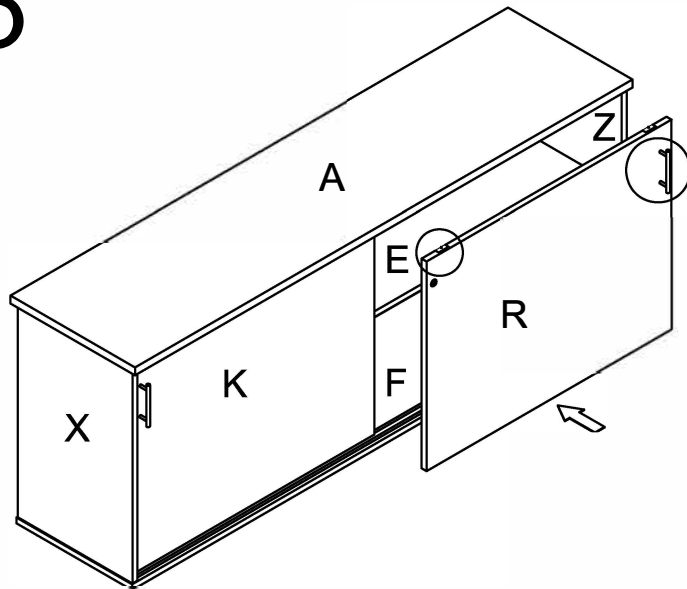

6

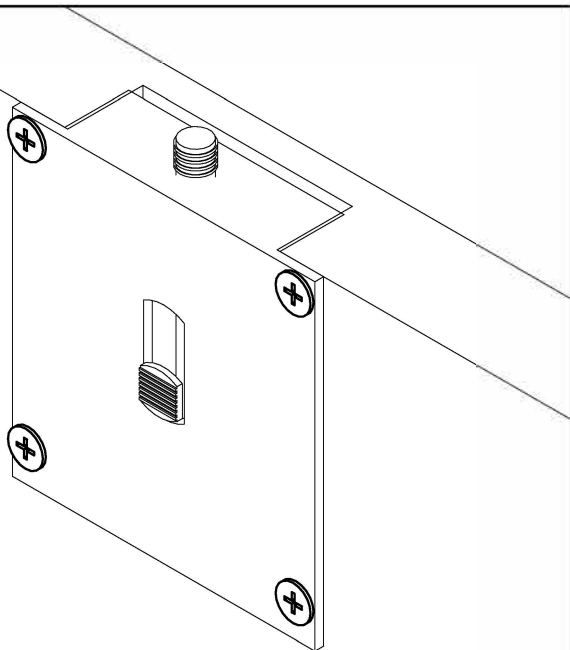



6



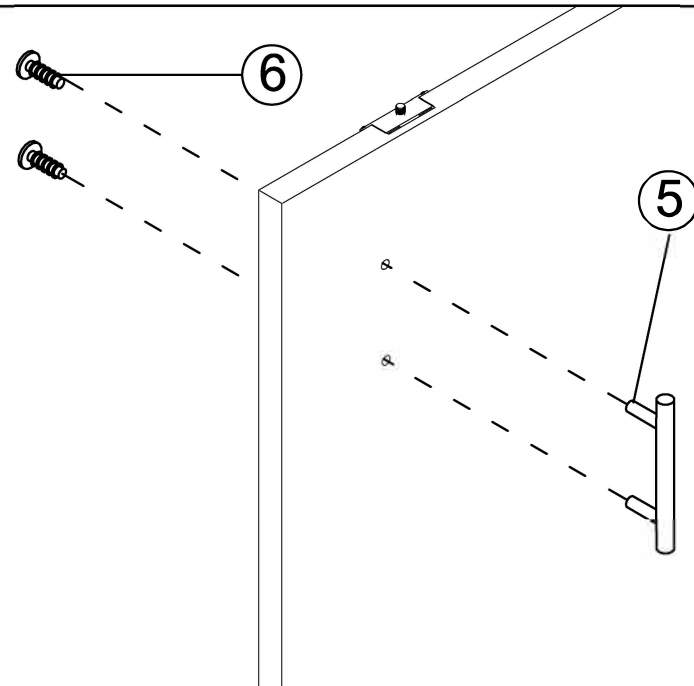


# ASSEMBLY INSTRUCTIONS


## CMZ1545

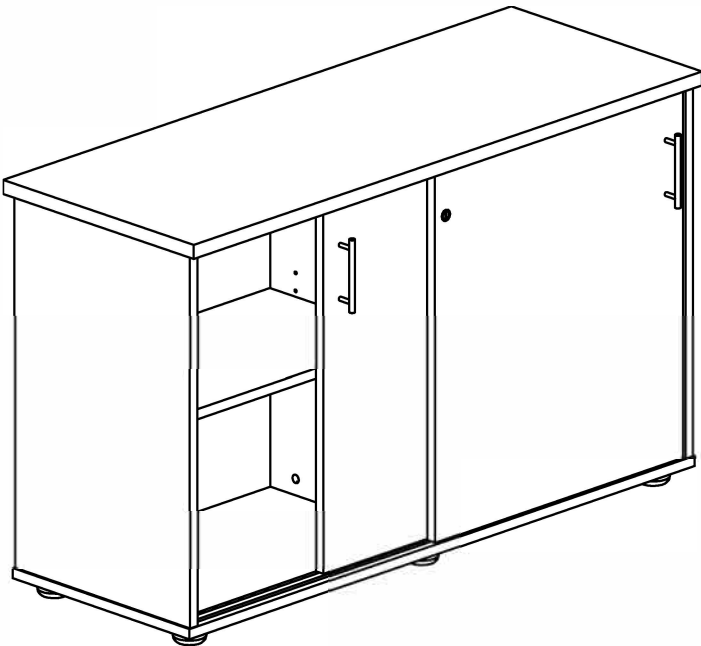


|                                                                                                                                     |                                                                                                                                        |
|-------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------|
| <br>pin 1<br>6×35<br>20PCS                        | <br>CAM 2<br>20PCS                                   |
| <br>Cam Cover 3<br>20PCS                         | <br>Bolt M8x16 4<br>18H <sub>1</sub> A ±0.5<br>8PCS |
| <br>T-Handle 5<br>2PCS                           | <br>Screw 6<br>4×22<br>4PCS                         |
| <br>CUSHION 7<br>25H <sub>1</sub> A ±0.5<br>6PCS | <br>Screw 8<br>4×30<br>6PCS                         |
| <br>LOCK 9<br>1PCS                               | <br>Screw 10<br>3.5×13<br>2PCS                      |
|                                                                                                                                     |                                                     |

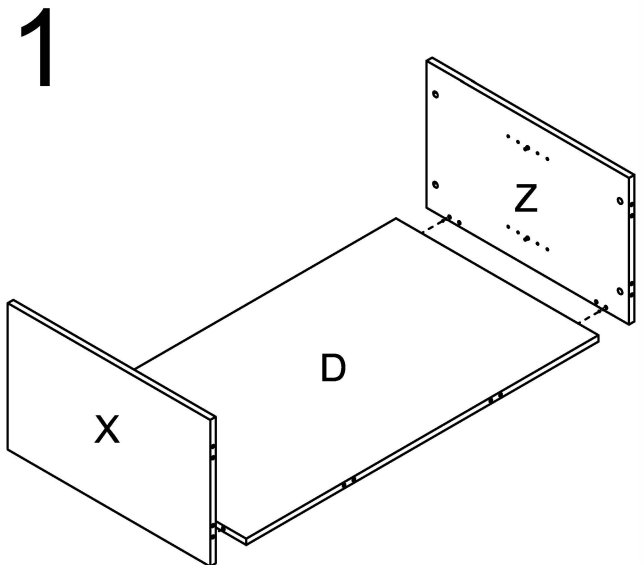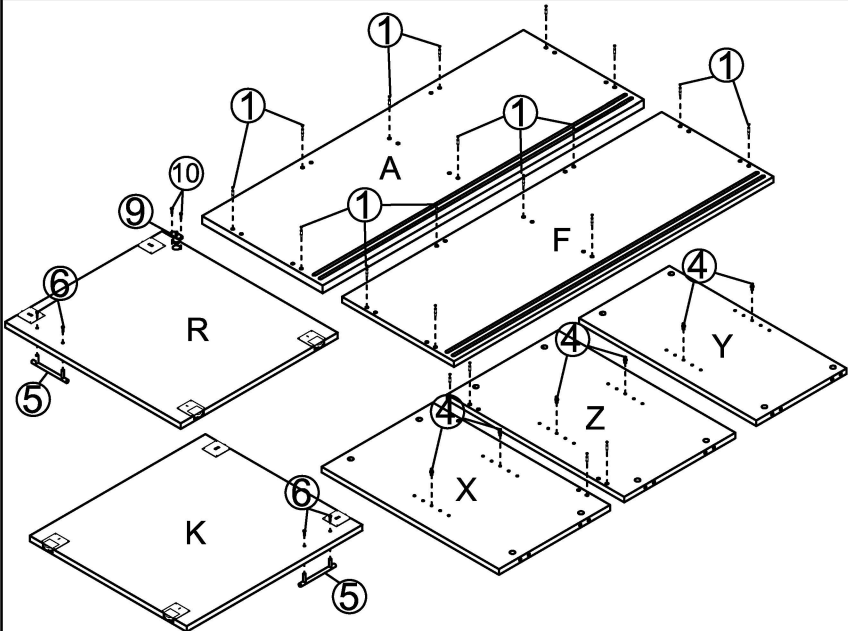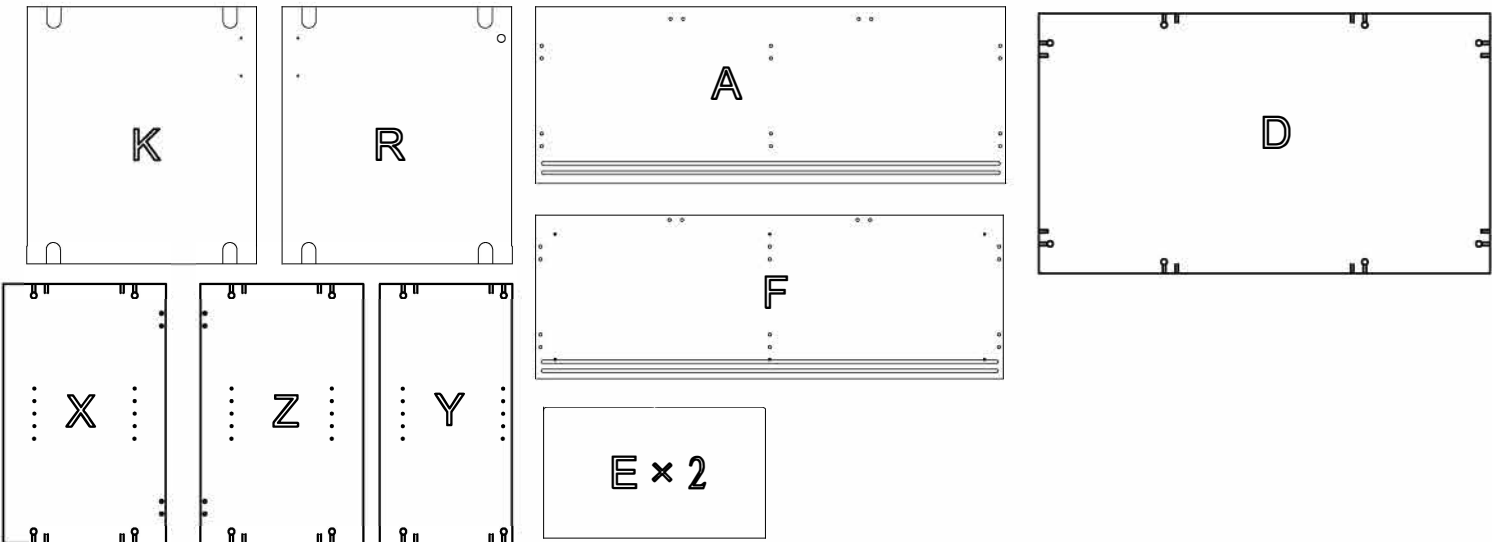


2

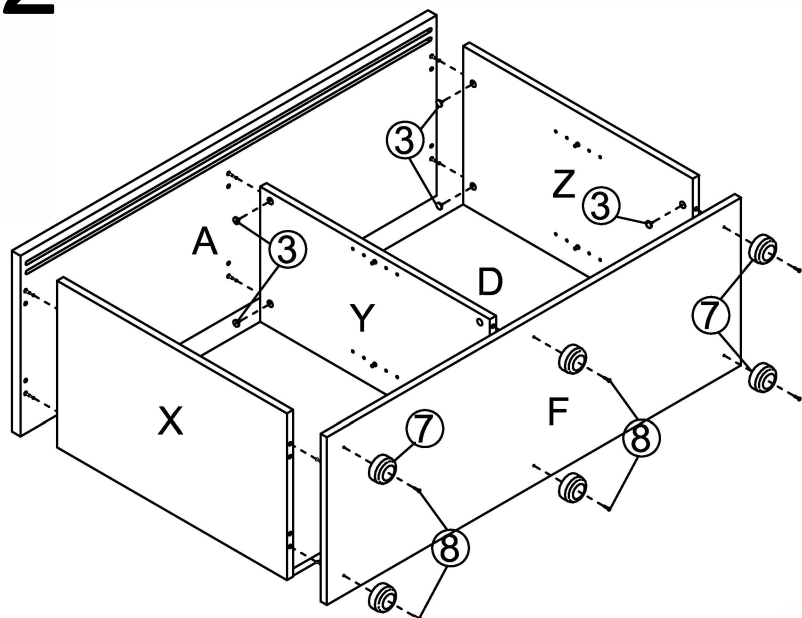


3

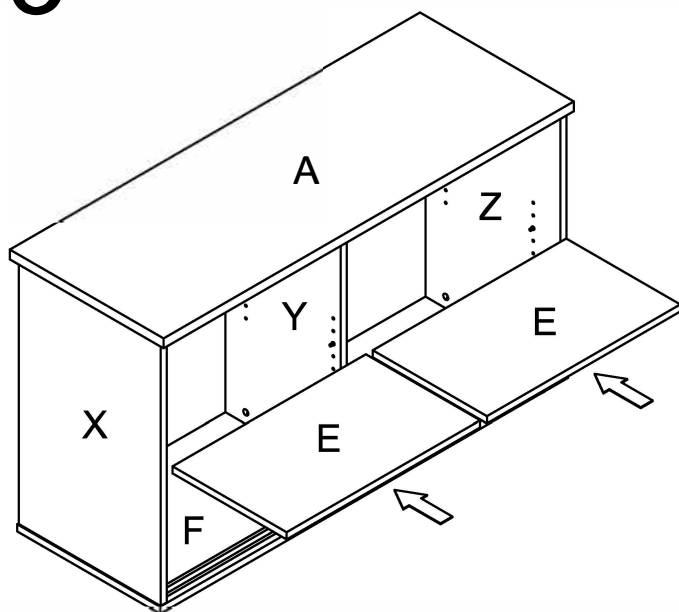



4

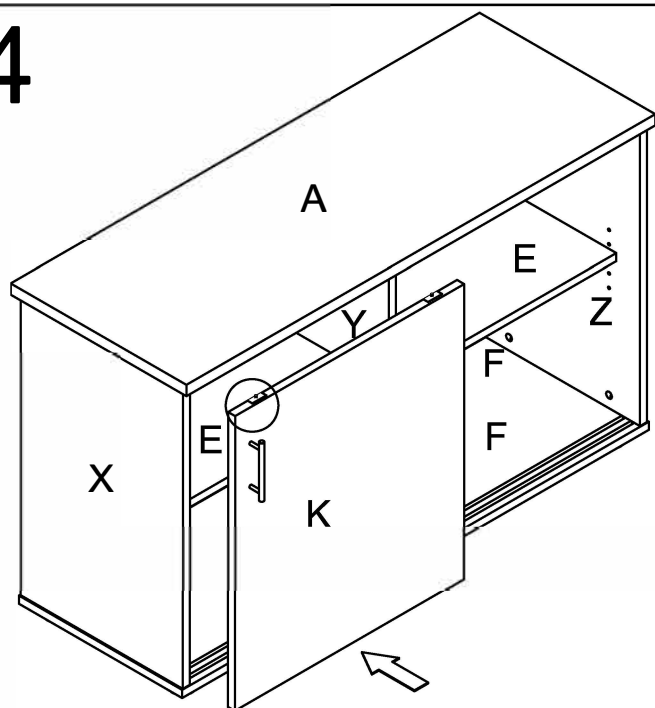

5

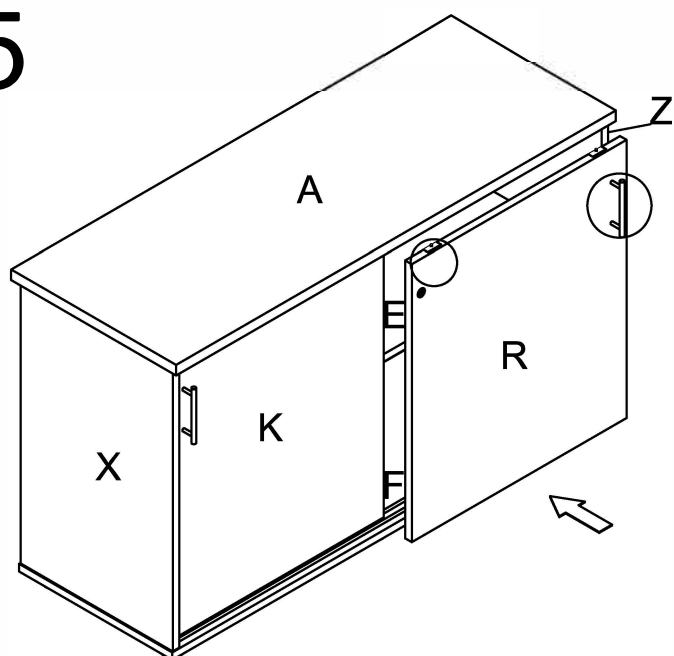


6


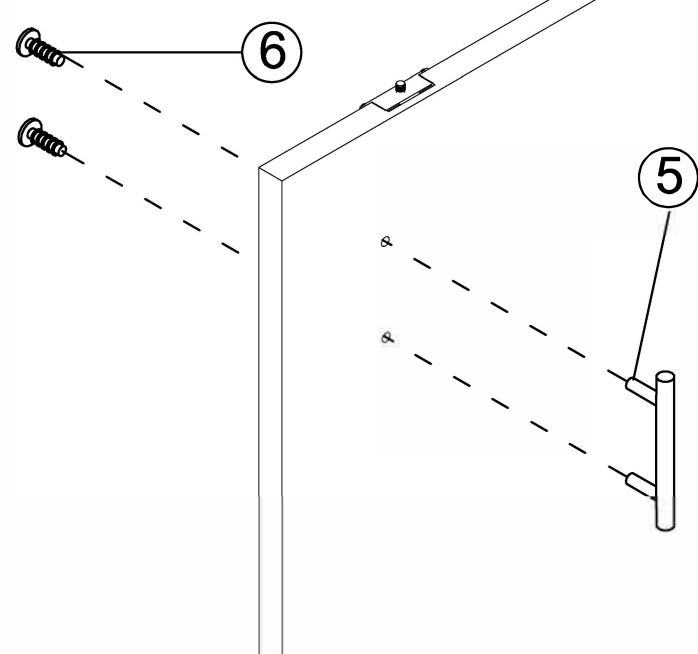
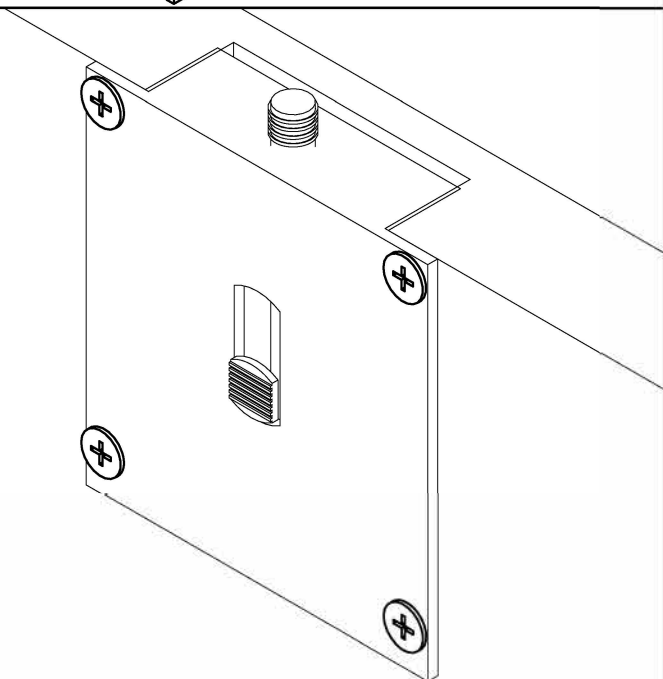


# ASSEMBLY INSTRUCTIONS


## CMZ1245 & SPC12

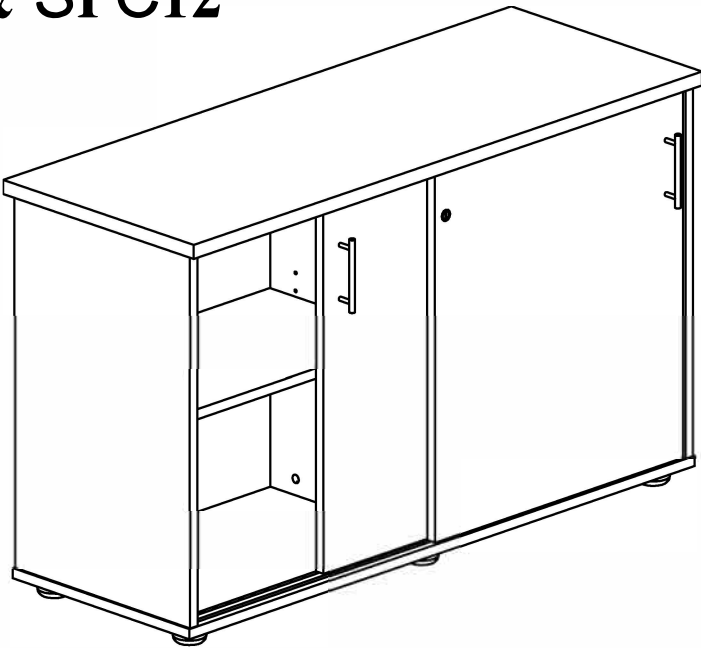


|                                |                                  |
|--------------------------------|----------------------------------|
| <b>pin</b><br>1<br>20PCS       | <b>6x35</b><br>CAM<br>2<br>20PCS |
| <b>Cam Cover</b><br>3<br>20PCS | <b>Bolt M8x16</b><br>4<br>8PCS   |
| <b>T-Handle</b><br>5<br>2PCS   | <b>Screw</b><br>6<br>4PCS        |
| <b>CUSHION</b><br>7<br>6PCS    | <b>Screw</b><br>8<br>6PCS        |
| <b>LOCK</b><br>9<br>1PCS       | <b>Screw</b><br>10<br>2PCS       |
|                                |                                  |

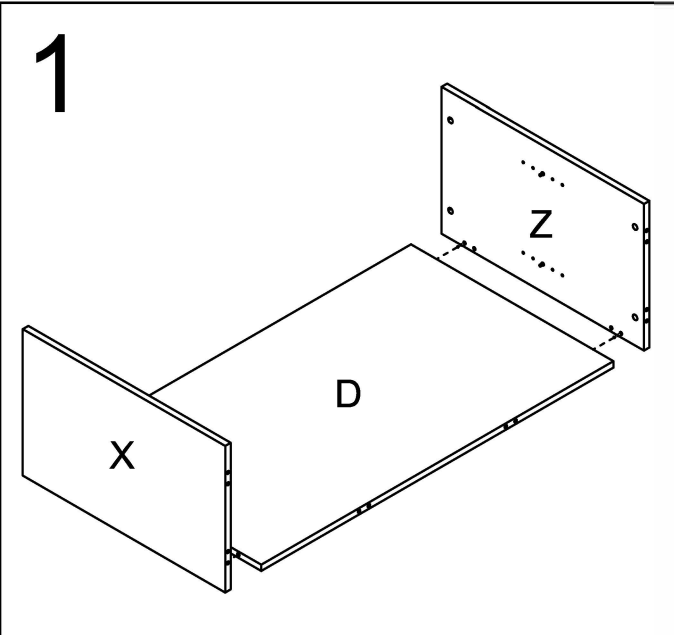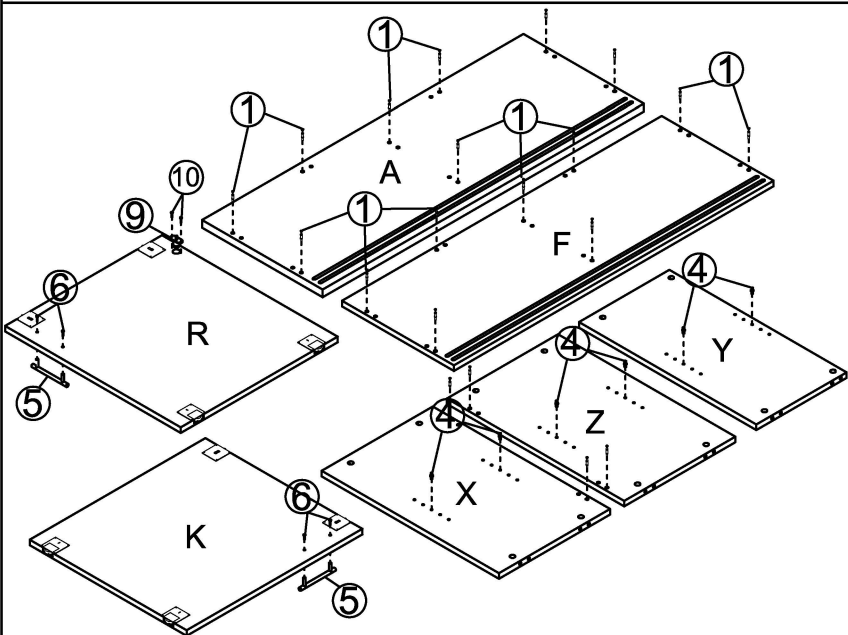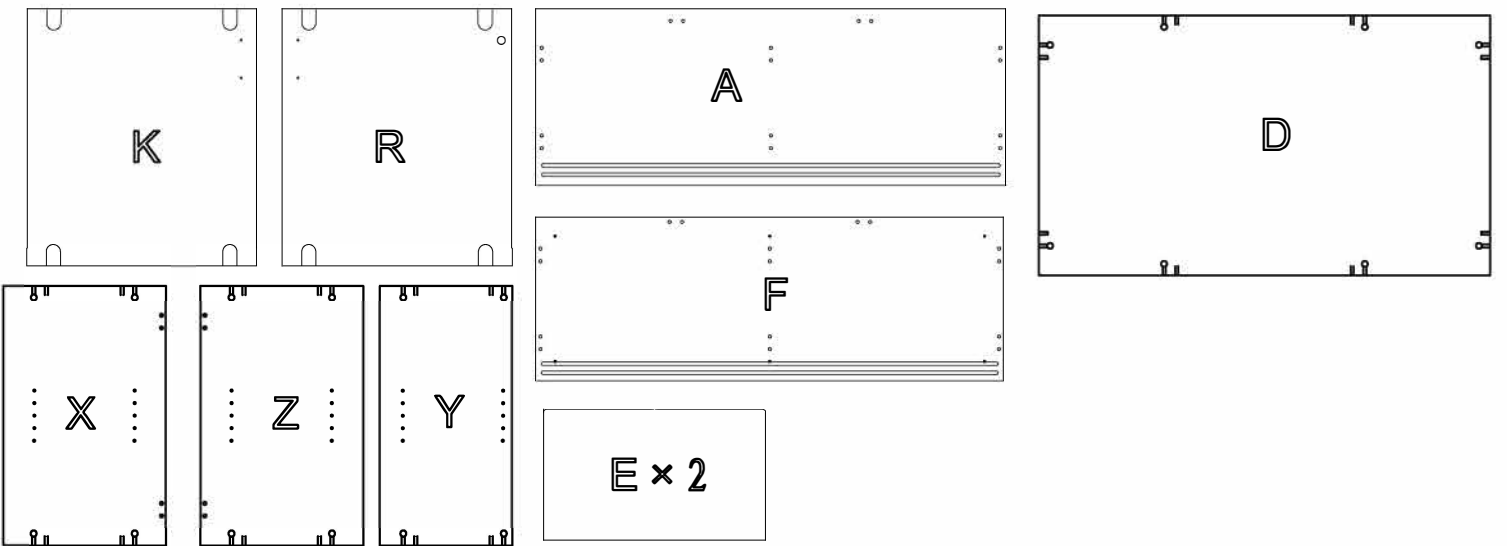


2

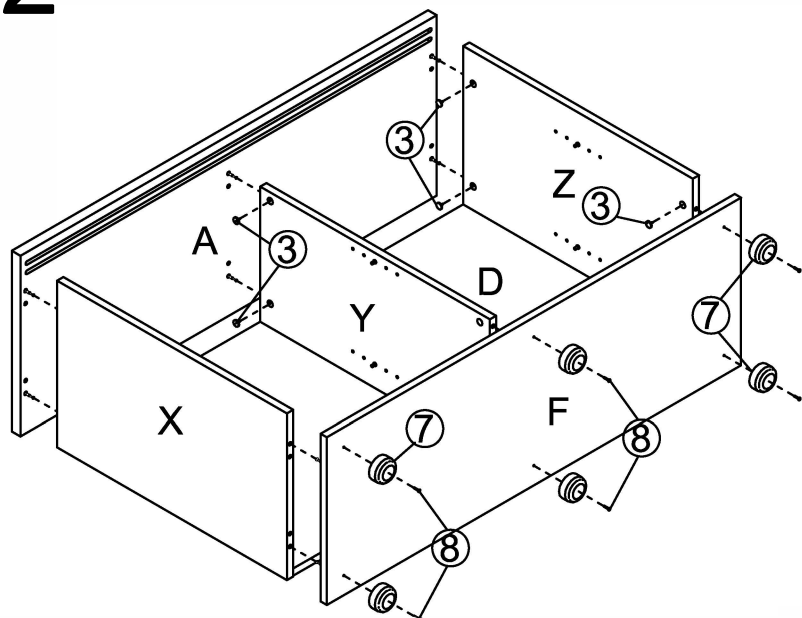


3

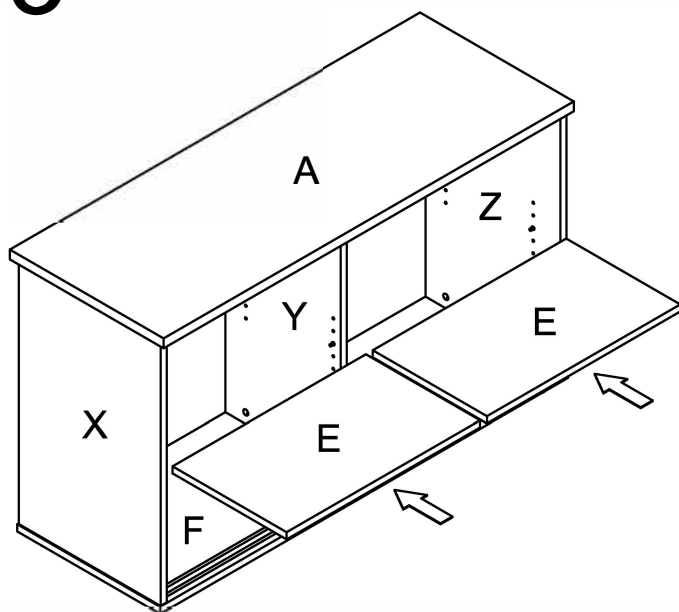


4

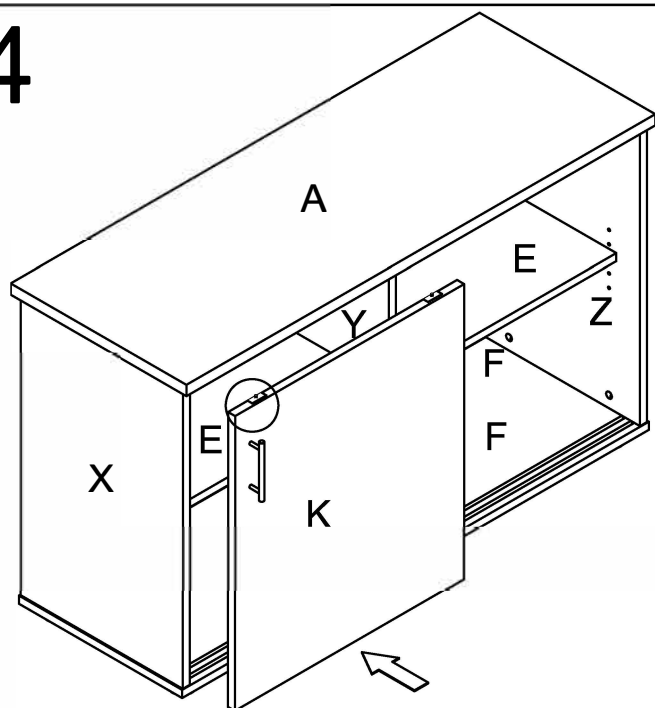

5

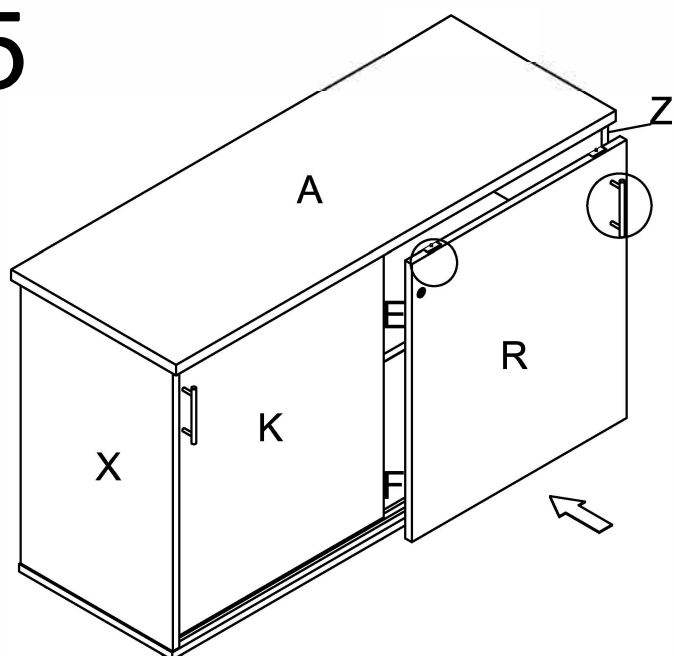

6

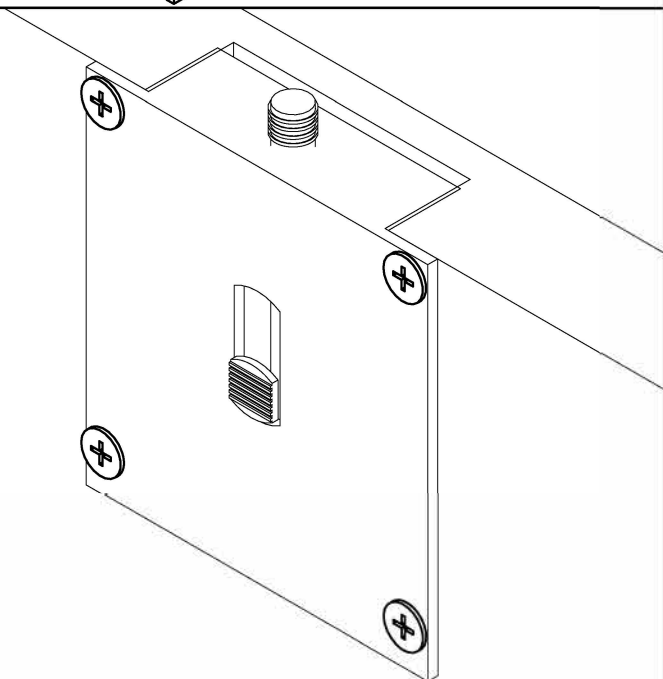

6

