
Assembly Instructions


Dal bExact 200 & 250 chair heavy duty chair

Arm assembly on Page 2
Headrest assembly on Page 3


Dal Brands How-To Guides

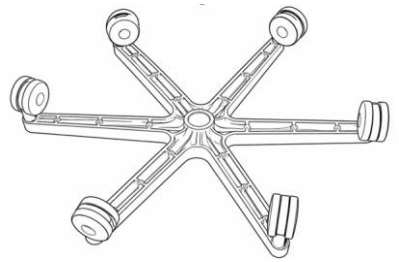


Step 1: Fit castors to base

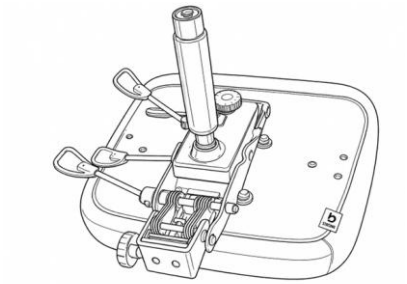


Step 2: Fit gaslift to mechanism
NB Fit Arms (optional) before starting this step. Arm instructions Page 2

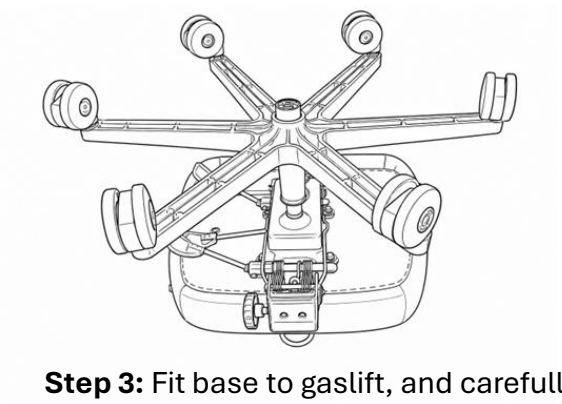


Step 3: Fit base to gaslift, and carefully turn the chair up the right way

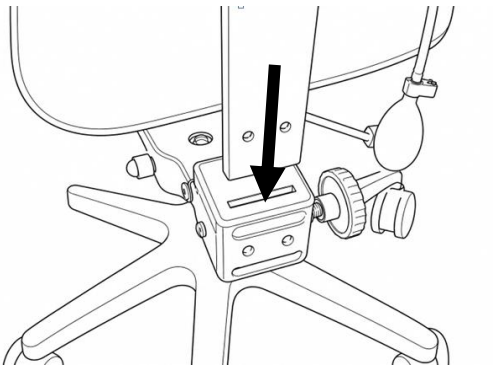

Step 4: Slide the backbar of the backrest into the slot at the back of the mechanism until the two holes line up with the 2 holes in the mechanism

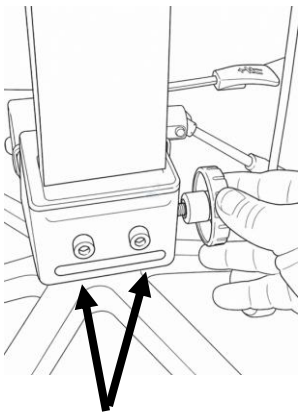

Step 5: Loosely fit the two screws through the holes in the mechanism, and into the two holes in the backbar. Whilst the screws are still a little bit loose, firmly tighten the handwheel to clamp the backbar.

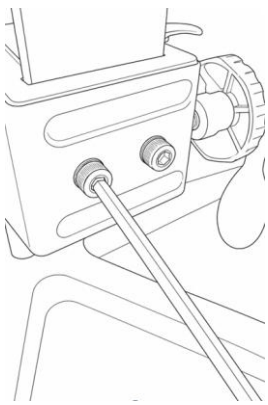


Step 6: Firmly tighten the 2 screws at the back of the mech

Assembly Instructions

Dal bExact 200 & 250 Arm assembly


Step 1: Turn seat upside down on top of the corner of a table, or the carton the chair came in.

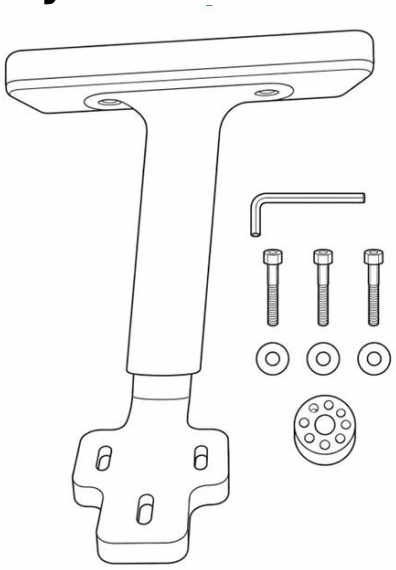


Arm Parts including allan key

Step 2: Check which is the left arm, and which is the right

Step 3: Loosely fit the 3 x screws with washers by hand to the 3 holes in the underside of the seat.

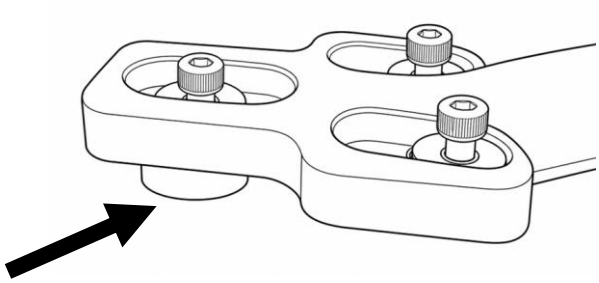

NB: Fit spacer under the single screw first

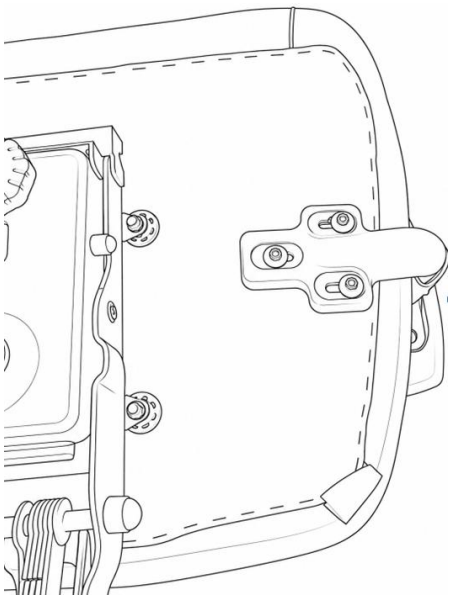


Step 3: Firmly tighten all screws with the allan key.


Then return to the instructions on Page 1 to complete the chair assembly

Assembly Instructions


Dal bExact Headrest assembly

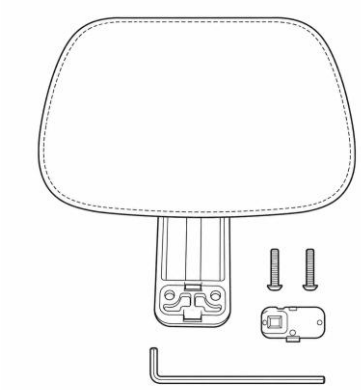

Headrest Parts including allan key

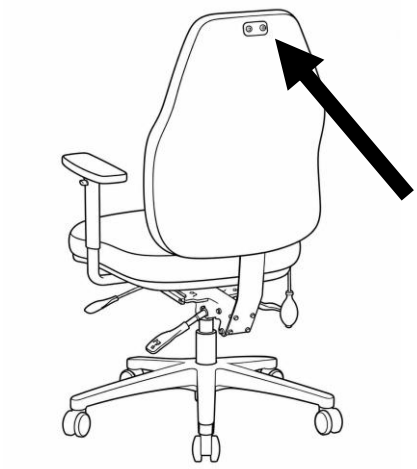

Step 1: after assembling the chair, you will see the two holes in the back of the chair.

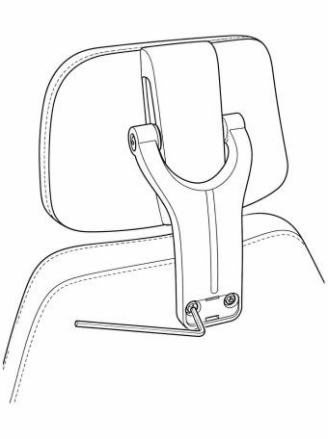

Step 2: Loosely fit the 2 x screws with by hand to the 2 holes in the backrest. Check they are not cross threaded before using the allan key

Step 3: Check the headrest is fitted straight, then firmly tighten all screws with the allan key.

Step 4, fit the screw cover cap with the small notch to the bottom

