
Assembly Instructions


Dal bExact chair

Arm assembly on Page 2
Headrest assembly on Page 3


Dal Brands How-To Guides

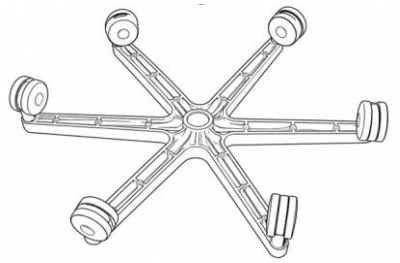


Step 1: Fit castors to base

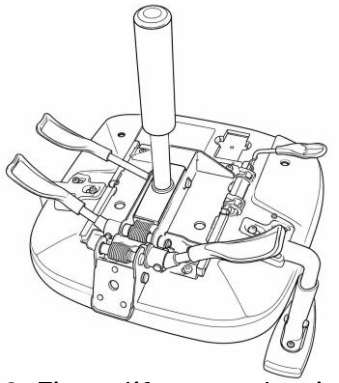


Step 2: Fit gaslift to mechanism
NB Fit Arms (optional) before starting this step. Arm instructions Page 2

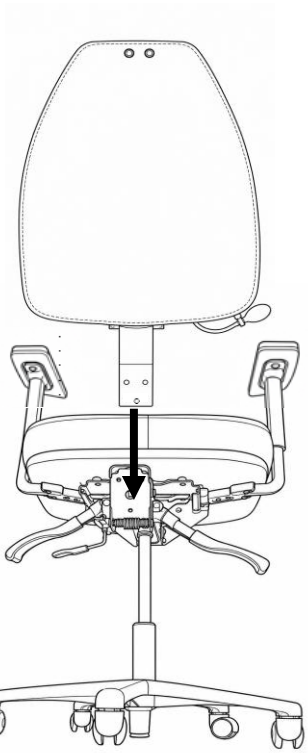




Screw Kit

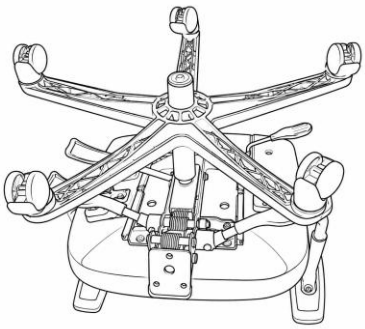

Step 3: Fit base to gaslift, and carefully turn the chair up the right way

Step 4: To attach the backbar to the back of the seat mechanism, place the front of the seat face down on the floor, then whilst supporting the backrest, loosely fit the lowest screw through the backbar & screw into the mechanism

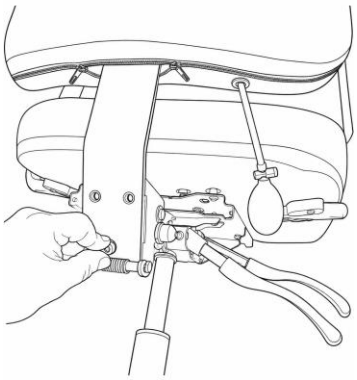

Step 5: Loosely fit the remaining two screws through the backbar into the mechanism, then stand the chair upright.


Step 6:
Whilst the screws are still a little bit loose, check the backrest is vertical, then tighten all 3 screws

Assembly Instructions

Dal bExact assembly


Step 1: Turn seat upside down on top of the corner of a table, or the carton the chair came in.

Step 2: Check which is the left arm, and which is the right

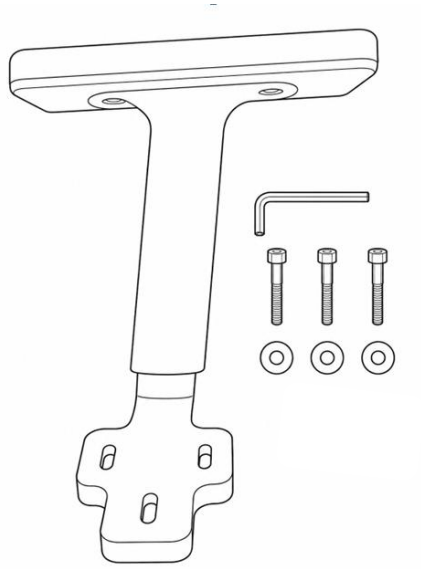


Arm Parts including allan key

Step 3: Loosely fit the 3 x screws with washers by hand to the 3 holes in the underside of the seat.

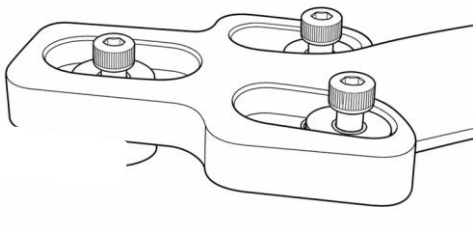


Step 3: Firmly tighten all screws with the allan key.

Then return to the instructions on Page 1 to complete the chair assembly

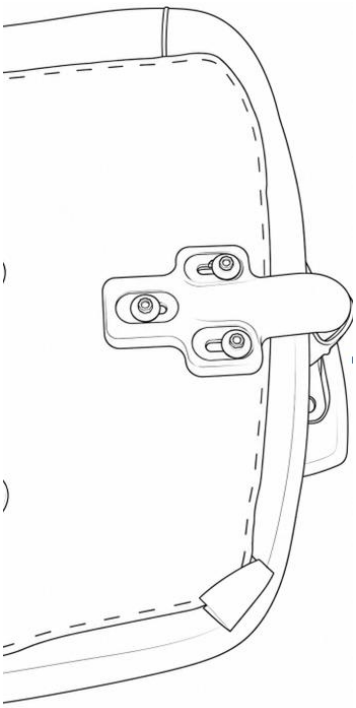


Assembly Instructions


Dal bExact Headrest assembly

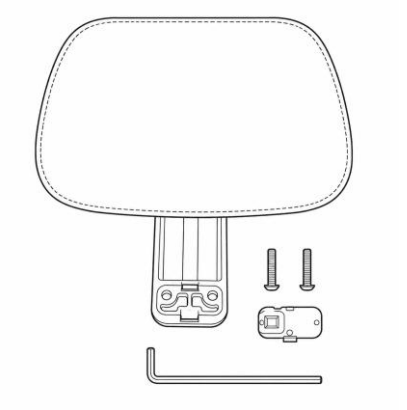

Arm Parts including allan key

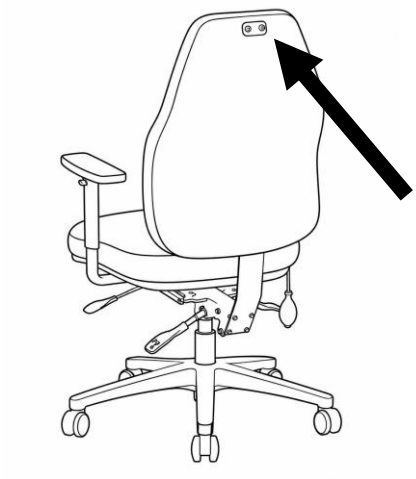

Step 1: after assembling the chair, you will see the two holes in the back of the chair.

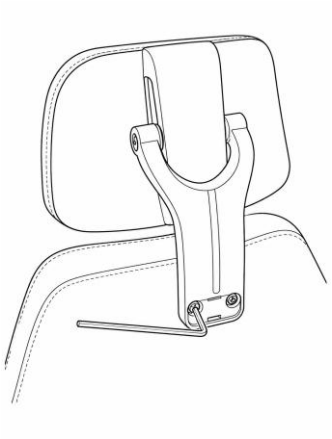

Step 2: Loosely fit the 2 x screws with by hand to the 2 holes in the backrest. Check they are not cross threaded before using the allan key

Step 3: Check the headrest is fitted straight, then firmly tighten all screws with the allan key.

Step 4, fit the screw cover cap with the small notch to the bottom

