


MAXISHIFT-E INSTRUCTIONS

What's in the box?



MAXISHIFT-E

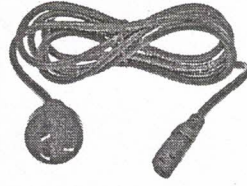


1.8m Power Cord




Allan Key


1. Place unit on desktop with a size is no smaller than 1000x650mm in size (2-person lift).

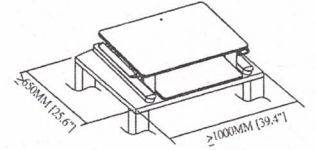

2. Plug the power cord into the power box, located underneath the worktop and connect the 3-pin plug to a power source.

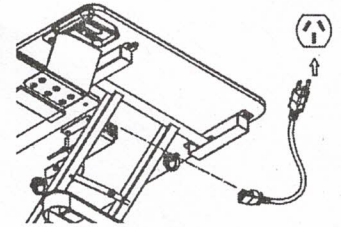


3. The power indicator light will show on the control pad once power is connected. Test unit by pressing the up and down buttons. Ensure the cord length is sufficient enough for the unit to extend to its maximum height. Do not allow the cord to be stretched.

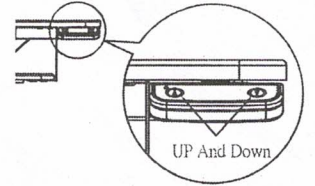


Optional keyboard adjustments:


4. **Keyboard height.** Loosen the height adjustment knobs at the sides of the keyboard bracket, Raise/lower as required. Re-tighten to lock into place. NB: raising the tray will raise keyboard off desktop. Adjustment of chair or desk height may be required, Maximum adjustment is +/-30mm.

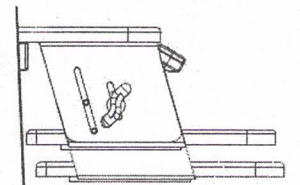

5. **Keyboard depth.** Use the Allen Key provided to remove the screws underneath the keyboard and reposition. Use no less than 4x screws each side (8 screws total) when placing keyboard tray in position. Adjustment is +/- 85mm.

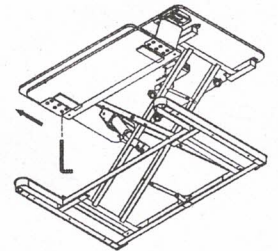

6. Place your desired hardware on the unit, using the provided cable clips to keep your cables tidy. Do not exceed 42.7kg on the worktop and 2.3kg on the keyboard tray.

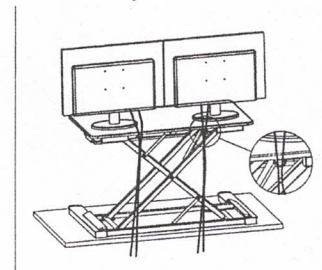

YOUR MAXISHIFT-E IS NOW READY TO BE USED.