


Fellowes

Breyta™ Plus Ergonomic Vertical Mouse



Breyta Plus Ergonomic Vertical Mouse | Souris verticale ergonomique Breyta Plus | Ratón vertical ergonómico Breyta Plus | Breyta Plus Ergonomische Vertikalmaus | Mouse verticale ergonomico Breyta Plus | Breyta Plus Ergonomische Verticale Muis | Breyta Plus ergonomisk vertikal mus | Ergonomiczna pionowa mysz Breyta Plus | Rato vertical ergonómico Breyta Plus | Breyta Plus ergonómikus függőleges egér | Breyta Plus ergonomisk vertikal mus | Breyta Plus ergonomisk vertikal mus | Breyta Plus ergonominen pystyhiiri | Эргономичная вертикальная мышь Breyta Plus | Breyta Plus Εργονομικό Κάθετο Ποντίκι | Breyta Plus Ergonomik Dikey Fare | Vertikální ergonomická myš Breyta Plus | Ergonomická vertikálna myš Breyta Plus | Ergonomski vertikalni miš Breyta Plus | Breyta Plus ergonomski vertikalni miš | Эргономична вертикална мишка Breyta Plus | Mouse ergonomic vertical Breyta Plus | عكبر ارگونومی אנכי Breyta Plus | ماوس Breyta Plus العمودي المريح

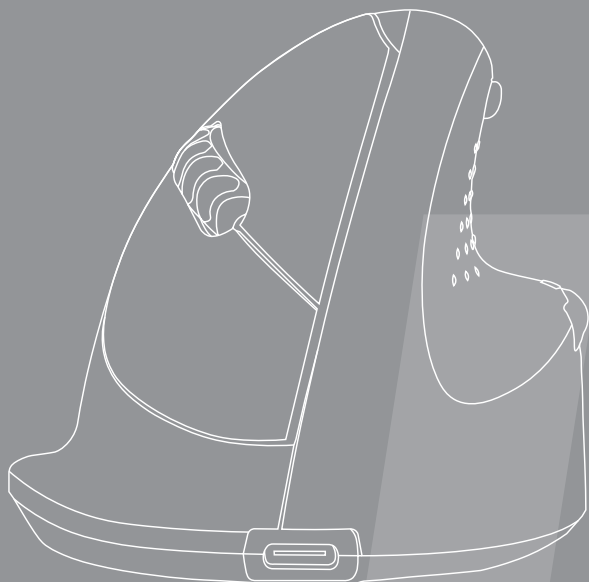

Small - Right Handed 100143580
Medium - Right Handed 100143581
Large - Right Handed 100143582

Medium - Left Handed 100143583
Large - Right Handed 100143584


▲ WARNING: IMPORTANT SAFETY INSTRUCTION — READ BEFORE USING!

PLEASE READ THESE INSTRUCTIONS BEFORE USE. DO NOT DISCARD: KEEP FOR FUTURE REFERENCE.

- This device is not a toy. Keep away from children. Read and follow all instructions and warnings before use.
- **▲ CHOKING HAZARD:** This device contains small parts which may be a choking hazard to children under 3. Keep away from children.
- This device is not serviceable. **DO NOT** attempt to open, repair, or modify this device. Doing so could present the risk of electrical shock or other hazards.
- Inspect the device and USB cable before use. If any parts are damaged, contact Fellowes Technical Support before resuming use.
- Keep the device away from moisture and do not use with wet hands. Moisture in or on the device may lead to electrical shock.
- This device contains a lithium-ion battery. Keep away from heat sources and open flames.

COMPONENTS

- 01** USB C charging port
- 02** Left (primary) button
- 03** Scroll wheel
- 04** Right (secondary) button
- 05** Forward (not for MacOS)
- 06** Backward (not for MacOS)
- 07** Sensor
- 08** On/off button
- 09** USB cable for both charging and wired use
- 10** Pair button
- 11** DPI button
- 12** Dongle
- 13** USB A adapter

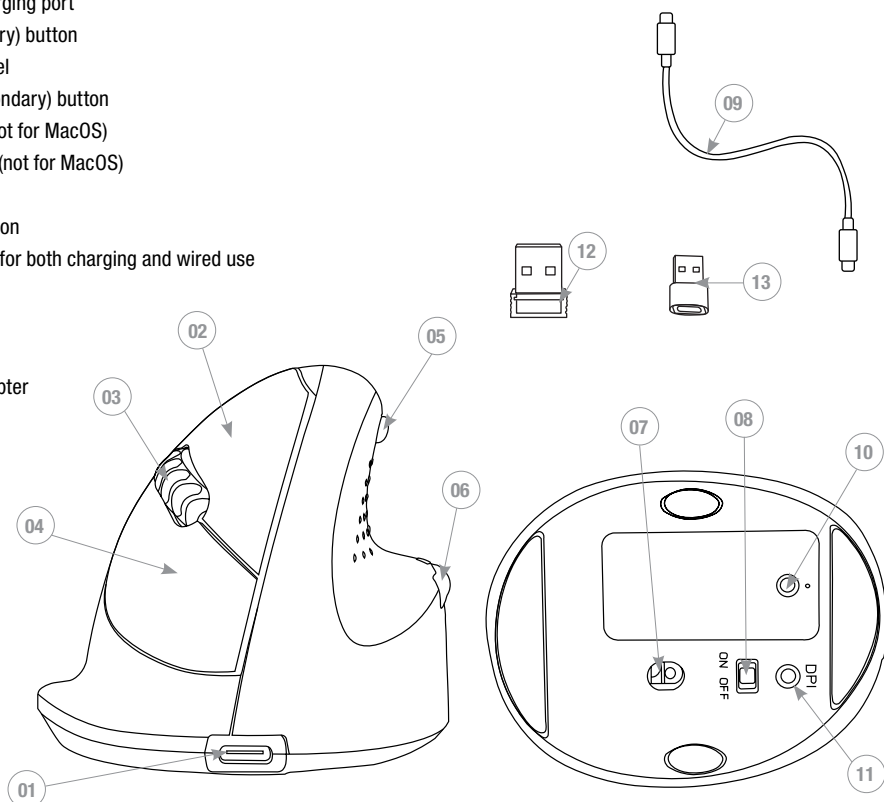

*Small right handed version shown for illustration purposes.

SPECIFICATION

Bluetooth® Li-ion rechargeable battery
Bluetooth® version: 5.4 system
Mode: GFSK Wired + Bluetooth
Working voltage: 3.7V
Working current: 10mA

Battery: 3.7V 500mAh
Charging voltage: 5V
Charging current: 200mA
Charging time: approx. 2 hours

PLUG & PLAY

The Breyta Plus Mouse uses Plug & Play technology. No additional software is required.

FOR BLUETOOTH® OPERATION

1. Make sure that your PC is Bluetooth® compatible. If you do not have Bluetooth®, you can use the dongle provided - See for dongle operation below.
2. At the bottom of your Breyta Plus mouse you will find the on/off switch (08). Turn the switch to “on”.
3. Press the pair button (10) for more than 3 seconds. You will see a blue light on the bottom of the mouse blinking.
4. On your computer search for Bluetooth®. Check if Bluetooth® is on. If not, turn on Bluetooth®.
5. Click on “add device” and then “Bluetooth®”. Select Breyta Plus Mouse.
6. Your Breyta Plus mouse will now be connected via Bluetooth® to your computer/laptop.

FOR DONGLE OPERATION

NB. For users without Bluetooth® enabled computers/laptops.

1. At the bottom of your Breyta Plus mouse you will find the on/off switch (08). Turn the switch to “on”.
2. Plug the dongle (12) into a spare USB A port on your computer/laptop.
3. Your mouse should now be connected to your computer.

TO SWITCH TO DONGLE OPERATION AFTER USING BLUETOOTH® OPERATION

1. Search for Bluetooth® on your computer/laptop.
2. Remove ‘Breyta Plus Mouse’ from your devices.
3. Hold the Bluetooth® dongle (12) next to the Breyta Plus Mouse and push the pair button (10) for more than 3 seconds. You will see a blue light on the bottom of the mouse blinking.
4. Plug the Bluetooth® dongle (12) into a spare USB A port on your computer/laptop.
5. Your mouse should now be connected to your computer.

FOR WIRED OPERATION

1. Your Breyta Plus mouse can also be used as a wired mouse.
2. Simply insert the USB cable (09) into the USB C charging port (01) on your mouse and then insert the other end into a spare USB C port on your computer.
3. If you do not have any spare USB C ports on your computer add the USB A adapter (13) provided to the end of your USB cable (09) and plug into a spare USB A port on your computer/laptop.
4. Your mouse will now be connected.

VARIABLE DPI

[400-800-1200-1600-2400] — POINTER SPEED

To adjust the speed at which your mouse pointer moves press and release the DPI button (11) on the base of the mouse. The light on the base will flash to indicate the DPI has been changed.

DPI (pointer speed)	Number of flashes	Speed
400 dpi	1 flash	Slowest
800 dpi	2 flashes	Slow
1200 dpi	3 flashes	Medium
1600 dpi	4 flashes	Fast
2400 dpi	5 flashes	Fastest

PRECISION SCROLL WHEEL WITH AUTO SCROLL (WINDOWS ONLY)

As well as a soft touch and feel precision scroll wheel (03), the Breyta Plus Mouse has an Auto Scroll feature. To activate this, click the Scroll Wheel inwards and the auto scroll is activated. Move the mouse forwards or backwards to start auto scrolling at the desired speed. Click the again and the Auto Scroll is stopped.

AUTO POWER SAVE

After approximately 30 minutes the mouse enters deep sleep mode. Click any button to reawaken and wait a couple of seconds.

Note: It is advised to switch the mouse to the 'OFF' position (08) if the mouse is to be transported to conserve power.

RECHARGEABLE BATTERY

The Breyta Plus mouse has an internal rechargeable battery. There may be a certain amount of charge already in the battery. To fully charge the battery, insert the USB cable (09) into a spare USB C port of your computer and into the USB C charging port (01) at the front of your mouse.

If you do not have any spare USB C ports on your computer add the USB A adapter (13) provided to the end of your USB cable (09) and plug into a spare USB A port on your computer/laptop.

It takes approximately 2 hours to fully charge your Breyta Plus Mouse when empty.

CARE AND STORAGE

- DO NOT store the device in areas of high temperature.
- Keep the device dry and away from moisture. If exposed to moisture, turn off and unplug the device. Contact Fellowes Customer Services before resuming use.
- Only use the USB cable provided with this product.
- Clean the device with a dry cloth.

DISPOSAL

- Do not dispose of your device in a fire or incinerator.
- Do not throw your Breyta Plus mouse in the bin. This device contains a lithium-ion battery. Contact your local electronics recycler for a recycling location in your area.
- Please be responsible. Many governments require that you recycle batteries.

HEALTH

Long periods of time at your workstation without regular breaks may cause discomfort. Should discomfort persist, see a qualified health professional.

USER ADVICE / MAINTENANCE

Try to avoid contact with strong medicated hand creams/sanitizer whilst using the Breyta Plus mouse.

Regularly remove dust and dirt build-up from the underneath of your Breyta Plus mouse to ensure a smooth glide movement.

DISCLAIMER

We make every effort to ensure that the information and procedure in this guide is accurate and complete. No liability can be accepted for any errors, or omissions and we reserve the right to make any changes without further notice herein.

TROUBLE SHOOTING

If your mouse not working properly, or you experience problems while using it please follow the steps mentioned below.

- Make sure that the Breyta Plus mouse is charged via the USB-C charging cable.
- Make sure that the on/off switch (08) on the underside of the base is in the “ON” position.
- If using dongle operation, make sure your Breyta Plus mouse dongle (09) is firmly plugged in to your computer's USB port. You can also try unplugging the dongle and then plugging it back in again or using a different USB port.
- If using Bluetooth® operation, remove the Breyta Plus mouse from computer/laptop Bluetooth® devices, and then re-add following the “For Bluetooth® operation” steps in this manual.
- Although your Breyta Plus mouse is plug & play, make sure your computer is up to date with the latest drivers / operating software for pointing devices.
- Test the mouse on another device, if it is still not working contact Fellowes Customer Services.

FELLOWES 5-YEAR LIMITED WARRANTY

Fellowes, Inc. (the “Company”) warrants this product to be free from defects in material and workmanship appearing within five (5) year from the date of the original purchase of the product. If such a defect appears during the warranty period, the Company will (at its sole option) either repair or replace the defective product with no charge for service or parts or refund the purchase price. The Company may require that the product be returned at the customer's expense to a location designated by Customer Service.

This warranty applies only to the initial retail purchaser and does not cover claims resulting from misuse, failure to follow instructions on installation and use, neglect, use of unauthorized attachments, commercial use, use on a current or voltage other than specified on the product, or unauthorized service during the warranty period on conditions otherwise covered by warranty.

THE DURATION OF ANY IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, IS EXPRESSLY LIMITED TO THE DURATION OF THIS LIMITED WARRANTY.

UNLESS REQUIRED BY APPLICABLE LAW, THE CUSTOMER'S EXCLUSIVE REMEDY FOR BREACH OF THIS WARRANTY OR ANY IMPLIED WARRANTY OR OF ANY OTHER OBLIGATION ARISING BY OPERATION OF LAW OR OTHERWISE SHALL BE LIMITED AS SPECIFIED HEREIN TO REPAIR, REPLACEMENT OR A REFUND OF THE PURCHASE PRICE, AT THE COMPANY'S SOLE OPTION.

UNDER NO CIRCUMSTANCE WILL THE COMPANY, ITS AFFILIATES, SUBSIDIARIES, RELATED ENTITIES, RESELLERS OR THEIR RESPECTIVE OFFICERS, DIRECTORS OR EMPLOYEES OR THOSE PERSONS FOR WHOM THEY ARE BY LAW RESPONSIBLE, BE LIABLE FOR CONSEQUENTIAL OR INCIDENTAL DAMAGES SUSTAINED IN CONNECTION WITH THE PRODUCT. THE COMPANY AND THESE OTHER PARTIES DO NOT ASSUME OR AUTHORIZE ANY REPRESENTATIVE OR OTHER PERSON TO ASSUME FOR ANY OF THEM ANY OBLIGATION OR LIABILITY OTHER THAN AS IS EXPRESSLY SET FORTH HEREIN.

The duration, terms and conditions of this warranty are valid worldwide, except where different limitations, restrictions or conditions may be required by local law.